

SOKANY®

HAND BLENDER

Model: SK-02007



220-240V 50/60HZ 400W MADE IN P.R.C

RoHS EAC     

SAFETY INSTRUCTIONS

1. By ignoring the safety instructions the manufacturer cannot be held responsible for the damage.
2. Do not use this appliance with a damaged cord or plug or when the appliance has malfunctions, or has been damaged in any manner. To avoid a hazard make sure that a damaged cord or plug will be replaced by a competent qualified repair service(*). Do not repair this appliance yourself. Never move the appliance by pulling the cord and make sure the cord cannot become entangled.
3. The appliance must be placed on a stable, level surface.
4. The user must not leave the device unattended while it is connected to the supply.
5. This appliance is only to be used for household purposes and only for the purpose it is made for.
6. To protect children against the dangers of electrical appliances, please make sure that you never leave the appliance unattended. Therefore you have to select a storage place for the appliance where children are not able to grab it. Make sure that the cable is not hanging in a downward position.
7. To protect yourself against an electric shock, do not immerse the cord, plug or appliance in water or any other liquid.
8. Switch off the appliance and disconnect it from the supply before changing accessories or approaching the parts that move while in use.
9. NOTE: The chopping blades are very sharp, avoid physical contact during emptying and cleaning the device, you can seriously injure yourself.
10. Always disconnect the device from the supply if it is left unattended and before assembling, disassembling or cleaning.
11. Do not allow children to use the device without supervision. * Competent qualified repair service: after sales department of the producer or importer or any person who is qualified, approved and competent to perform this kind of repairs in order to avoid all danger. In any case you should take the appliance to this repair service.

PARTS DESCRIPTION

1.Button

2. S/S Stick



BEFORE THE FIRST USE

1. Take the appliance and accessories out of the box. Remove the stickers, protective foil or plastic from the device.
2. Before using your appliance for the first time, wipe off all removable parts with a damp cloth. Never use abrasive products.
3. Put the power cable into the socket. (Note: Make sure the voltage which is indicated on the device matches the local voltage before connecting the device. Voltage 220V-240V 50-60Hz 600W)
4. Never use the mixer for longer than 1 minute continuously, after this allow the mixer to cool down for 5 minutes.
5. The blades of the slicing and chopping disk and the blender chopping are very sharp, avoid physical contact, you can seriously injure yourself.

USE

Using the blender

The hand blender is intended for:

1. Blending fluids, e.g. dairy products, sauces, fruit juices, soups, mixed drinks and shakes.
2. Mixing soft ingredients, e.g. pancake batter or mayonnaise.
3. Pureeing cooked ingredients, e.g. for making baby food.
4. Put the S/S stick in the motor housing until it clicks.
5. Immerse the blade guard completely in the ingredients to avoid splashing.
6. Press and hold the normal or turbo speed button to switch on the appliance. The higher the speed, the shorter the processing time required.
7. When you use the turbo speed button, the appliance operates at maximum speed.
8. Blend the ingredients by moving the appliance slowly up and down and in circles.
9. Press the release buttons to disconnect the motor housing from the S/S stick.

Using the hand mixer

1. The mixer is intended for stirring minor ingredients such as egg white, cream, instant desserts and eggs and sugar for cakes. Do not beat thicker mixtures such as margarine and sugar, this may damage the mixer. Use the S/S stick. Put the whisk base in the motor housing until it clicks and place the whisk into the whisk base.
2. Press the release buttons to disconnect the motor housing from the whisk base.
3. Immerse the whisk completely in the ingredients. To avoid splashing, start processing at normal speed by pressing the normal speed button. Continue with the turbo speed after approx. 1 minute by pressing the turbo speed button.

Using the blender

1. The chopper is intended for chopping ingredients such as nuts, meat, onions, hard cheese, boiled eggs, garlic, herbs, dry bread etc.
2. The blades are very sharp! Be very careful when you handle the blade unit, especially when you remove it from the bowl, when you empty the bowl and during cleaning.
3. Place the blades onto the pivot point located in the middle of the bowl. Attention! The blades are very sharp. Screw the lid clockwise to the bowl. Place the motor housing in the lid until it clicks.
4. Press and hold the normal or turbo speed button to switch on the appliance.. The higher the speed, the shorter the processing time required.
5. When you use the turbo speed button, the appliance operates at maximum speed. After processing, release the normal or the turbo speed button to switch off the appliance and wait until the blade has stopped rotating.
6. Press the lid release buttons and turn the lid anti-clockwise to remove it.

CLEANING AND MAINTENANCE

1. Always remove the plug from the socket when the device will be cleaned. • Clean the appliance with a damp cloth. Never use harsh and abrasive cleaners, scouring pad or steel wool, which damages the device.
2. Never immerse the device in water or any other liquid. Do not immerse the motor unit into water.
3. CAUTION! The blades are very sharp, be careful when cleaning it. Avoid all bodily contact with the blades, they can seriously injure yourself. If exposed to heat or caustic cleaners they might become misshapen or discolored.



GUIDELINES FOR PROTECTION OF THE ENVIRONMENT

This appliance should not be put into the domestic garbage at the end of its durability, but must be taken to a central point for the recycling of electric and electronic domestic appliances. This symbol on the appliance, instruction manual and packaging puts your attention to this important issue. The materials used in this appliance can be recycled. By recycling of used domestic appliances you contribute to foment the protection of our environment. Ask your local authorities for information regarding the point of recollection.