

SOKANY[®]

MULTI-PURPOSE BLENDER

MODEL:SK-03046

INSTRUCTION MANUAL



220-240V~ 50/60Hz 900W MADE IN P.R.C

RoHS CE ENEC     

Please read the instruction manual carefully before using it !

Caution

1. Please read the instruction carefully before use.
2. Connected to the appliance, make sure the local voltage match the voltage shown in the label line.
3. Do not allow children or handicapped person to play with the machine.
4. Please operate the machine according to the stated and interval time. Not to run overload or no-load working.
5. If the supply cord is damaged, it must be replaced by manufacture or its service agent or similarly qualified persons in order to avoid hazard.
6. The blade is very sharp, pay attention not to hurt your hand when cleaning and disassembling the machine .
7. Blade components and mixing cup should be fully tighten, not leave the sealing ring, otherwise, it will cause leaking or blade component off .
8. Do not use the blade components working on the host directly. Also not touch rotating components when working.
9. Do not use the machine before covering the cover.
10. Before inserting the power, ensure not put the finger or any other tool into jug.
11. Processing temperature of food should not exceed 60 °C . Don not working exceed 1 min constantly, waiting to the main engine cool down as before when repeat use.
12. Processing capacity of food should not exceed 1000ml.
13. There is a overheat protection function, as too hot during working, the machine will stop working.
14. Then should off power, do not use until the main engine cool again.
15. Not flush the main engine directly to avoid accident.
16. Only for home use.

Main parts




Low Cupx1



Flat Blade Basex1



High Cupx1

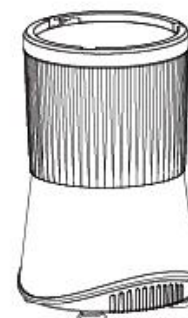

Power Basex1



Shake to Go Lidx1



Shake to Go Bottlex1



Mug Ringx2



Party Mugx1



Cross Blade Basex1



Solid Lidx2

Main technical parameter

Model:

Rated voltage : 220-240V~

Frequency: 50-60Hz

Rated input power: 900W

Protection against electric shock: type II

Operation method**Blending**

1. Put the machine on a stable table
 2. Fix the cross blade to the bottom of jug.
 3. Inject right amount water into jug, then put into the diced vegetable.
- Attend: processing capacity of food should not exceed than 2/3 capacity.
4. Put on the cover, then tighten it clockwise
 5. Plug in the machine into AC220-240 voltage.
 6. Put the blending cup on the main body and be sure the upper concave parts fix well to the convex parts on the bottom of the cup, then tighten it clockwise, machine starts to work
 7. Choose the right speed, if blend some hard food, please kindly choose the second speed. Normally, it is finished within 1 min.
 8. After blending, release the cup by counterclockwise. The machine stop working, then pull out plug, pouring off food.
 9. Please do according to the above information, if need reuse.

Grinding

1. Put the food in the low cup, making sure it does not exceed 100g.
2. Twist the flat blade on the bottom of low cup and fix it on the main body.
3. Power the plug, tighten the cup by clockwise, the machine starts to grind, it is finished within 30 seconds.

Clean and maintain

1. In case of electric shock, you must be sure the machine is power off when cleaning the body.
2. Clean the main body by wet cloth instead of water.
3. Do not wash the products by dish washer.
4. It can be used again once you clean up the parts and assemble them well.
5. Some parts may be change color according to behavior in service.
6. The machine should be used often, otherwise place it in the dry and ventilated environment.