

SOKANY[®]

Electric Coffee Pot

MODEL:SK-04008

INSTRUCTION MANUAL



220-240V 50/60Hz 600W MADE IN P.R.C

RoHS EAC  CE  

CONTENT

EN/ ENGLISH 01-03

EN/ ENGLISH



Power: 220-240V 50/60Hz 600W

Maximum capacity

Coffee pot: 250ml

Before use

Please read instructions carefully and completely before using the appliance.

Caution

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children unless they are older than 8 years and supervised.
- Children younger than 8 years shall be kept away from the appliance and its mains cord.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Never immerse the unit in water or other liquids.
- This appliance is designed for household use only and for processing normal household quantities.
- Before plugging into a socket, check whether your voltage corresponds with the voltage printed on the bottom of the appliance and that you are using an earthed socket.
- Avoid touching hot surfaces, especially the keep warm plate. Never let the cord come in contact with the keep warm plate.
- The keep warm plate is subject to residual Heat after the appliance is switched off.
- Do not use the glass carafe in the microwave.
- Always use cold water to make coffee.
- before you start preparing a new pot of coffee, always allow the coffee maker to cool down for approx. 5 minutes (switch off the appliance), otherwise steam can develop. When filling the water tank with cold water.

Making Coffee

When filling the coffee cups with fresh cold water, refer to the carafe height markings or the water level indicator and fill to the desired number of cups.

- Add the desired amount of ground coffee, corresponding to the number of cups being brewed. We recommend using 1 tablespoon or 1 coffee scoop of ground coffee per Cup, but use more or less to suit your taste.
- Coffee cups in its position on the keep warm plate.
- Plug the cord into an electrical outlet and press The ON/OFF button.
- Brewing time per cup: approximately 1 minute.

Auto Off Function

For your convenience and also additional safety, the Appliance will switch off automatically 10-15 minutes after the brewing cycle is complete. START "Red" change OFF "Blue". Working again requires a fresh start.

Note: The maximum amount of ground coffee the coffee maker can take is 10 coffee scoops or tablespoons.

Descaling

Frequency will depend upon the hardness of your tap water and how often you use the coffee maker.

Descaling is indicated when the brewing time is much longer than 1 minute per cup.

You can use a commercially available decalcifying Agent not affecting aluminum.

We recommend using the Braun Descaling Solution (may be purchased separately).

Cleaning and Maintenance

- Always turn coffee maker off and remove the plug from the electrical outlet before cleaning.
- Let the appliance cool down.