

SOKANY[®]

WONDER CHOPPER GRINDER

MODEL: SK-06027

INSTRUCTION MANUAL



220-240 V 50/60Hz 800W MADE IN P.R.C



CONTENT

EN/ ENGLISH 01-02

Precautions for Safe Use

1. Be sure to disconnect the power supply before disassembling, installing or adjusting any part of the product.
2. Before using, please check whether the power cord, plug and other parts are damaged. If any damage is found, please stop using the product and contact the customer service in time.
3. Before adding ingredients, please make sure that the knife rest of skein meat is installed in place and can operate freely.
4. It is strictly prohibited to empty the cup (i.e. no food in the cup) or over load use.
5. Do not add ingredients exceeding the ambient temperature of +50 degrees into the cup, and do not put them in the microwave oven for use and disinfection, so as to avoid breakage of the cup.
6. The machine cannot process hard food materials, such as coffee beans, dried soybeans and other similar food materials.
7. Please operate strictly according to the rated working time. The continuous working time shall not exceed 15 seconds.
8. After finishing the processing, please remove the motor after the motor and blade stop rotating and ensure the power is disconnected.
9. If the product stops working during operation because the motor is equipped with overheating protection device, please turn off the switch, disconnect the power supply, and cool down for 20-30 minutes before using.
10. Do not put the motor into water or other liquids, nor wash it under water or other liquids.
11. Do not use corrosive liquids (such as gasoline) to clean the product.
12. Do not put any parts of this product into the dishwasher for cleaning.
13. The machine should be stored away from the reach of children. The product should not be used by people (including children) who are physically unfit, mentally handicapped or lack relevant experience and knowledge.
14. The machine is only suitable for personal or family use, not for commercial use.

Cleaning and Maintenance

1. Before cleaning the product, be sure to remove the electrical head and disconnect the power supply.
2. Please clean the product in time after using.
3. When cleaning, please rinse the cup body and accessories with water and wipe them dry. The blade is very sharp.
4. The outside of the motor can be wiped with a damp cloth. Do not put the main body into the liquid or wash it in water or other liquid.
5. Store the product in a dry place and avoid direct uv exposure.
6. Make sure the product is clean and dry before storage.

Cleaning and Maintenance

The fault phenomenon	Cause analysis	Troubleshooting
During the first few USES of the product, the motor gave off an unpleasant smell	If the product still emits this odor after repeated use, please send it to the nearest repair point for testing	The new motor is used normally at first
Stop in service	1.The voltage is too low 2. Motor temperature control protection	1. Check if the voltage is too low 2. Stop using for 20-30 minutes
Abnormal vibration or loud noise	1. The skein knife rest is not installed in place 2. Product placement is not stable 3. The voltage is too high 4. Overeating	1. Take out the ingredients and install the skein knife rest in place 2. Stable product placement 3. Check if the voltage is too high 4. Turn off the switch, disconnect the power and remove the excess ingredients
Card knife	The blade gets tangled or stuck in the food	Turn off the switch, disconnect the power, remove the ingredients and cut into small pieces

Note:

◆ The above is the common fault analysis and troubleshooting method, for other faults, please contact the company's customer service department, or directly to the company's designated repair point for repair, do not disassemble repair.