

SOKANY[®]

ELECTRIC RICE COOKER

Model: SK-07058

INSTRUCTION MANUAL

1.8L



110V 50/60HZ 700W MADE IN P.R.C



CONTENT

EN/ ENGLISH -----01-03

EN/ ENGLISH

AUTOMATIC ELECTRIC COOKER HEAT PRESERVATION TYPE

Automatic Electric Cooker is equipped with a permanent Magnetic Controlling System. It's good-looking in designs, exquisite and solid in Construction, and easy, safety dependable to control, with low power.

INSTRUCTIONS

1. Cleaning and putting the rice into the pot.


After cleaning the rice in another container, put it into the Pot. According To the rice soft / hard degree, add water. (See Fig 1)



Fig(1)

2. Placing the Pot

Place the Pot inside the Cooker and move it around so as to make it touch Closely with heating plate. Put the Lid on the top. (See Fig 2)

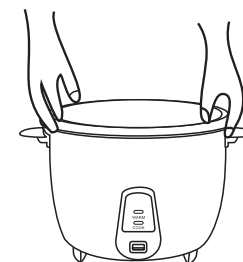

Fig(2)


3. Cooking Rice

Connect the wire plug first into the input socket of the cooker, then put another plug in the power socket and switch on. At this time , the pilot red lamp and pilot yellow lamp will light up showing that the cooker is working. When the rice is well boiled , the switch button will be automatically realized and the pilot lamp will go out. Keep the Lid on for 10 Minutes and the rice will get thoroughly cooked.

4. Function of the Heat Preservation Unit.


The temperature of the rice in the Cooker will automatically be kept within range of 60°C - 70°C. Below this point the pilot yellow lamp will begin to filcher, indicating that the Automatic Heat Preservation Unit has been set to work.

NAMES OF PARTS PARTS IDENTIFICATION

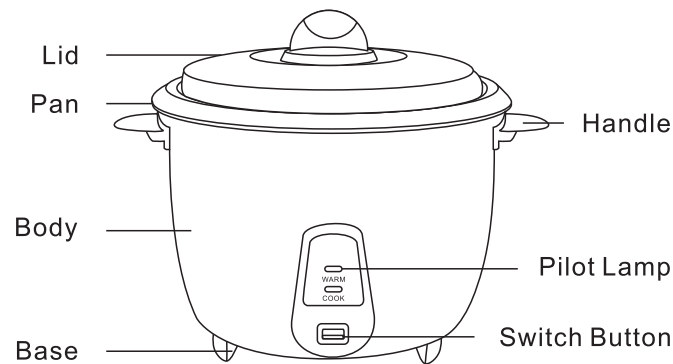


CAUTION

1. Keep Pan and Heating plate clean. No rice grain, dust or any other foreign matter should be allowed to remain between the bottom of the Pot and the surface of the Heating plate. Otherwise the Cooker and in serious case it's parts or elements may burnt out. (See Fig3)

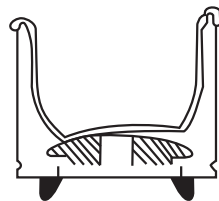


Fig(3)

 2. Prevent the bottom from being bumped. Otherwise the Pot may be deformed by bumping prejudicial to the performance of the Cooker. (See Fig. 4)

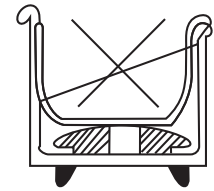

Fig(4)

 3. Make the rice evenly in the Pot.
The right way (See Fig. 5)

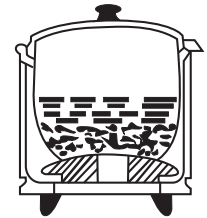

Fig(5)

4. Don't dip the Cooker into water. Clean it with piece of soft and damp cloth when soiled. For the Pot to clean, it can be washed with water.

5. Don't use the Cooker to boil acid or alkaline foodstuff. Don't keep the Cooker in corrosive gases or damp place.

6. Place the pot well, then insert the plug of Cooker into the power socket. Draw out the plug before you take the Pot out.

7. Don't allow to place near fuel when the cooker is working.

8. The product's Ground Line is yellow - green or green.

ATTENTION

1. It is not prepared for operating by the weak in physique, the slow in reaction or the people who have mental disorder (including the children), unless they are under instruction or help from the people who are responsible for their safety.
2. Children should be monitored. in order to make sure they don't play with this equipment.