

SOKANY[®]

STEAM IRON

MODEL:SK-11036

INSTRUCTION MANUAL



220-240V 50/60Hz 2400W MADE IN P.R.C



CONTENT

EN/ ENGLISH	01-02
-------------------	-------

Instructions for use

Important safety

Please read the instructions carefully and keep them before use

Do not immerse the product in water or any liquid

This product is only for indoor use and commercial use is prohibited

When the product is connected to the power supply, please make sure the circuit voltage is consistent with the rated voltage of the product. And confirm that the circuit is well grounded

Electric irons must use steaming water, not tap water or other liquids

When adding water to the electric iron water tank, the water level shall not exceed the maximum water level

When an electric iron is added or poured, the cord plug must be removed from the socket

The product must be used and placed on a stable surface

Electric irons with falling or damaged power cords shall not be used, and electric irons with leakage in water tanks or products shall not be used again

The electric iron must be taken care of during the operation or operation, and the user must not leave midway

Persons or children with disabilities must be under the guardianship of their guardians. Children are children aged 8 years and older and under 14 years of age

Do not let the power cord touch the hot surface of the electric iron, to wait for the electric iron to cool completely before collecting the electric iron, when collecting the electric iron gently coil the power cord on the iron.

Electric iron should be placed in the collection of children should not be touched, and children should not be allowed to play as toys, children refers to children over 8 years old under 14 years old

Do not repair or replace the power cord by yourself. If the power cord is damaged, it shall be sent to the dealer's post-sale service center or a person with professional qualification for repair or replacement. To avoid electric shock caused by incorrect assembly

The first use will have a small amount of smoke, which is a normal phenomenon and will not be used again.


After removing the packing, make sure that the appliance is not damaged. If in doubt, do not use the appliance and consult an expert.

When the iron releases steam, do not aim the steam at people or animals to avoid burns.

When using electric irons, you should not touch the hot surface with your hand. The hot surface

includes the soleplate and the " " surface

一、Part name

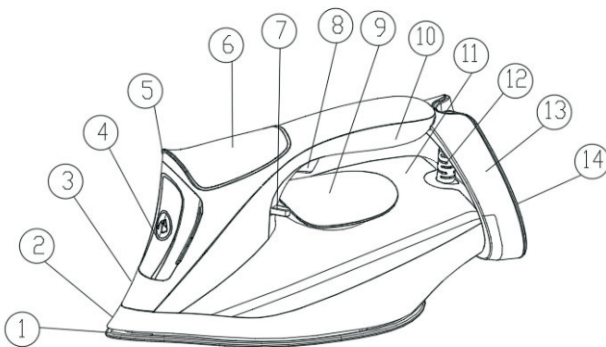

- | | | | |
|--------------------|---------------------|---------------|---------------------|
| 1、soleplate | 2、skirt | 3、top cover | 4、water inlet cover |
| 5、led display ring | 6、led display | 7、steam lever | 8、burst button |
| 9、tank-cover | 10、handle | 11、tank | 12、cord_bushing |
| 13、rear cover | 14、rear cover plate | | |

二、Temperature setting

According to the fabric to be ironed touch "+", "-" to select the appropriate temperature, it is recommended to start with low-temperature fabric ironing, and finally iron the fabric that needs the maximum temperature.

三、Fill water

1.The plug must be removed from the power socket to cut off the electric iron; Or remove the tank from the product before adding water

2.Electric iron should use pure water or steam water, do not put water or other liquids into the electric iron

3.The water in the electric iron water tank shall not exceed the maximum water level

四、Dry iron

1. connect the appliance to the appropriate circuit, adjust the gear, select the appropriate temperature for ironing

2.When the light is turned off, it means that the iron has finished heating and ready to iron

3.Do not turn on the steam knob during dry ironing

五、Steam ironing

1.Fill the tank of the appliance with water

2.Adjust the temperature to cotton or above. After the heating is completed, open the steam knob, and steam will be released from the bottom hole later

3.Turn the steam knob to the closed position, stop the release of steam

六、The explosion

1.Fill the tank of the appliance with water

2.Adjust the temperature to WOOL level or above. After the heating is completed, press the explosion button, and strong steam will be emitted from the bottom plate

七、Low temperature protection

In order to prevent consumers from releasing steam at a lower temperature and causing water flow to flow out directly from the holes in the bottom plate, the product is designed with a low temperature protection function.

八、Automatic power off

1.When the iron is powered on, the product should be placed flat or left or right on the table. The product will be powered off 30 seconds later

2. When the iron is powered on, the product is placed vertically on the table with its tail, and the power will be cut off after 8 minutes $\pm$ 30 seconds

九、Cleaning and collection

1.Do not start cleaning the iron until it has cooled completely

2.Clean the bottom and surface of the electric iron with wet cotton cloth. Do not use rough or hard things to clean the electric iron to avoid scratching the soleplate

3.The appearance of electric iron is dirtier, when wet cotton cloth cannot be cleaned, can use wet cotton cloth dip neutral detergent to clean, cannot use strong acid or strong alkali to clean

4.When there are impurities in the steam of the electric iron soleplate, please use a bamboo stick to remove them

5.When electric iron is collected, must wait for the bottom plate to cool completely before proceeding