

SOKANY[®]

STEAM IRON

MODEL:SK-11037

INSTRUCTION MANUAL



220-240V 50/60Hz 2400W MADE IN P.R.C



Important and Safety instructions

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience or knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- **WARNING: Misuse of the appliance could cause personal injury.**
- Cleaning and user maintenance shall not be made by children without supervision.
- Keep the iron and its cord out of reach of children less than 8 years of age at all times.
- The iron must not be left unattended while it is connected to the supply mains.
- The plug must be removed from the socket before filling the iron with water.
- The iron must only be used with the stand provided.
- The iron must be used and rested on a stable surface.
- When placing the iron on its heel or stand, ensure that the surface on which the heel or stand is placed is stable.
- The iron is not to be used if it has been dropped, if there are visible signs of damage or it is leaking.
- The filling aperture must not be opened during use.



CAUTION - HOT: Burns can occur from touching hot parts, hot water or steam.

Electrical requirements and mains cable

- Check that the voltage on the rating plate of your appliance corresponds with your house electricity supply which must be A.C. (Alternating current).
- Do not operate with a damaged supply cord or grommet, it must be replaced by the manufacturer, its service agent or similarly qualified person in order to avoid a hazard.

ATTENTION:


When the plug connecting with the power socket, the user is not allowed to leave. When the power cord is damaged, contact your dealers or an authorized service center for repair.

In case of any repairs, replacement of cord or plug, or adjustment, please consult a qualified technician, or take appliance to an authorized service facility.

WARNING: To avoid electric shock, do not immerse appliance in water / liquid.

- Do not let the mains lead come into contact with the hot soleplate of the iron.
- **WARNING: This appliance must be earthed.**
PLEASE READ ALL INSTRUCTIONS AND KEEP FOR REFERENCE

Steam iron overview

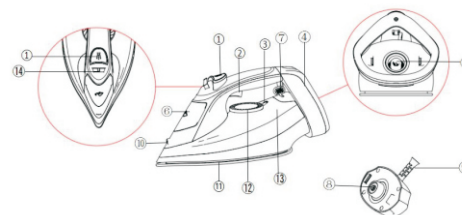

1. Water spray button	6. Filling hole with cap	11. Soleplate
2. Steam boost button	7. Locker for charging base	12. Temperature dial
3. Temperature indicator light	8. Charging base connector	13. Water tank
4. Iron heel	9. Power cord	14. Steam/self clean switch
5. Heel Connector	10. Spray nozzle	

Temperature Setting

Look for the "iron" symbol on the garments with the dots indicating the correct temperature to set on the thermostat of your appliance.

Follow these instructions.

If the garment does not have any care instructions, refer to the following table:

- Nylon and acetate
- Wool, silk or mixed fabrics
- Cotton, linen (steam)

These indications relate to the fabric of the garment and not to any applications in other materials such as embroideries, designs, etc. Fabrics with decorations applied (embossed designs, fabrics designs, embroideries) must be ironed at a moderate temperature.

If the fabric consists of various fibres, always choose the temperature suitable to the fibre that requires, the lowest temperature.

Using the Iron

1) Filling the tank


Before first use, remove all packaging, including the protective cover on the soleplate if stainless steel soleplate. Make sure the iron is not plugged in. Set the steam switch (14) to off. Fill the water

tank (13) via the filling hole (6). To fill the tank with the maximum amount of water, we recommend the iron is tilted vertically whilst being filled.

WE RECOMMEND THE USE OF DISTILLED, DEIONISED OR DEMINERALISED WATER.

Never use battery topping up fluid or water containing any substances like starch, sugar, fragrant additives or defrosted water from a refrigerator.

2) Charging base(Cordless using)

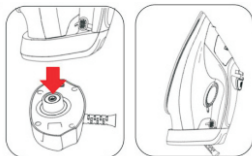


Plug in the charging base and switch on at the mains.

Rest the iron on its heel (4) on the charging base, ensuring that the heel connector (5) meets the charging base connector (8). Connection is made when the power indicator light (3) on the handle illuminates. Wait until the iron reaches the desired temperature, then commence ironing.

Throughout your ironing session, the iron must be replaced onto the charging base every few seconds or whenever you adjust your garments, to keep the heat topped up.

Steam ironing is proposed to use in corded mode.


4) Switching on the steam

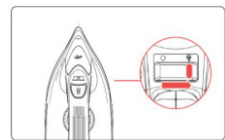

If required, switch on the steam using the steam switch (14).

The amount of steam is automatically adjusted to suit the temperature selected.

3) Temperature Selection

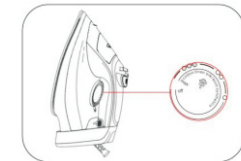


Set the temperature dial (12) to the temperature required (see 'Temperature Setting' on page 3). **The temperature indicator light (3) will turn from Blue/Red to light turns off until the required temperature is reached.**

Tip: The temperature indicator light will switch on whilst you are ironing and replacing the iron on the base.

Tip: Begin with cool fabrics and work up to higher settings. An iron heats up quicker than it cools down so this will save you time and energy.


5) Using the water spray

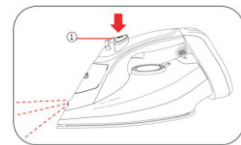

For stubborn creases, use the water spray button (1).

If using for the first time, you may need to press this a few times to pull the water through.

Using the iron for steam ironing (steam boost)

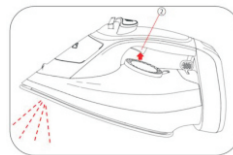

6) Steam boost

Press the steam boost button (2) for an extra steam burst for stubborn creases / heavy fabrics.

NOTE: For optimum steam quality, do not operate the shot more than three times in succession.


Features of your iron

Dry ironing

Your iron can be used for dry ironing. Set the steam switch (14) to off and set the temperature dial (12) as desired (see setting temperature).


You won't need water in the tank unless using the water spray or steam boost features.

Vertical steam

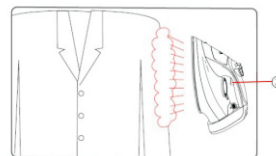

Vertical steam is useful for removing creases from hanging clothes, curtains, etc. Hold the iron between 1cm and 2cm away from the item and press the steam boost button (2).

How to use the iron in corded mode

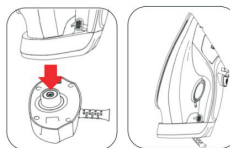

1. Put the iron on charging base (handle and cord guard in line)
2. Adjust the iron position (left or right) till there is a sound of Click. Iron will be connected to charging base and locked. We can start the corded mode ironing.
3. Using the iron as a regular iron. Continuous steam and steam boost function is commend in this mode.

How to clean and store

- ⌘ After using, lift the iron with the filling hole downwards to empty the remaining water from the Water tank.
- ⌘ Insert the plug into the socket, and set the Temperature Control Dial to "MAX" for 1-2 minutes to evaporate the remaining water, and then unplug the iron and let it cool down before storing it.