

SOKANY[®]

VACUUM CLEANER

 
MODEL:SK-13020
INSTRUCTION MANUAL



220-240V 50/60Hz 2000W MADE IN P.R.C

RoHS EAC  CE  

PART LIST

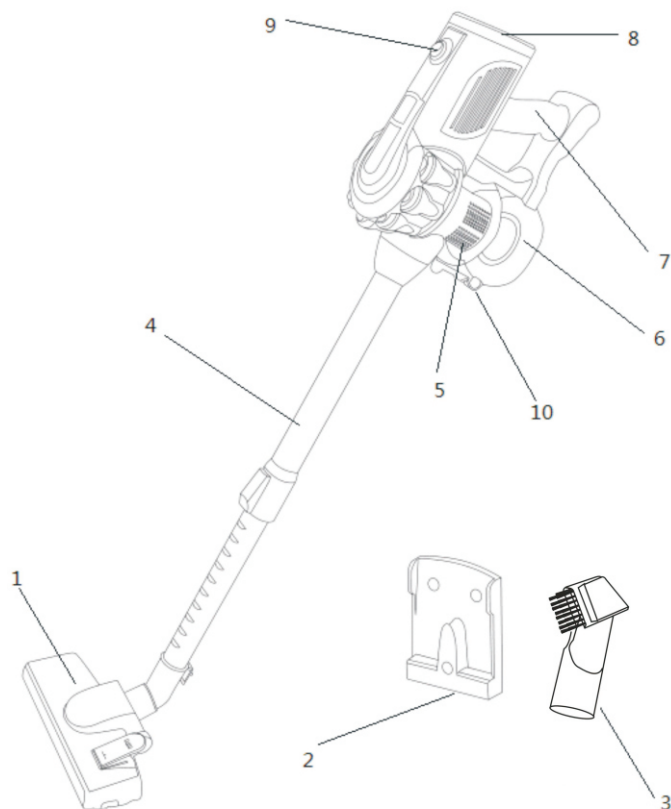

1. Floor Brush
2. Wall mount
3. Nozzle
4. Tube
5. Multi-cyclonic Filter
6. Dust container
7. Handle
8. Wind-out board
9. On/Off Button
10. Dust Container Release Button

TECHNICAL DATE	
MODEL	
Voltage Supply	220~240V
Frequency	50/60Hz
Power	2000W

Important Safety And General Instructions

1. The appliance is intended for domestic use only. Commercial and industrial use may cause damages and will void warranty.
2. Any use not respecting the usual precautions of the device removes any responsibility to retailer of the importer or the manufacturer.
3. Before plugging in, check that the voltage of your wall outlet correspond to the rated voltage, described on the rating plate of the appliance.
4. Do not operate the appliance with a damaged cord or after malfunction or has been damaged in any manner.
5. If the plug cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
6. To reduce the risk of electric shock, never operate this product with wet hands, spill liquid in product or submerge it in water.
7. Close supervision is necessary when your appliance is being used near children or infirm persons.
8. Do not use the appliance if your hands are wet. Never use the appliance if gets wet and unplug it immediately.
9. Do not use the device if appliance fell or if there is visible signs of damage. Do not make roll on its cable.
10. Do not use this device to suck up incandescent or sharp objects(cigarette ends of cigarettes, lit(swached on) matches, hot ashes, nails).
11. Do not use this vacuum cleaner to suck up pins, threads, cement, plaster,or quite different material of construction or decoration.
12. Never suck up liquid products nor toxic matter, cleaners or gasoline(essence) or dangerous or flammable products. You would risk damaging seriously your device.
13. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.Children should not play with the appliance. Cleaning and user maintenance should not be made by children without supervision.
14. Keep the appliance and its cord out of reach of children less than 8 years.
15. Never use the appliance on somebody or on animal's body.
16. Make sure never to block the zones of air inlets
17. Keep the appliance away from heat sources.
18. Never use the electric cable to raise, transport or disconnect the device.
19. Switch the appliance off before unplugging and cleaning it.
20. The appliance is not intended to be operated by means of external timer or separate remote control system.

 
WARNING :

Keep hair, loose clothing and fingers away from openings and moving parts.

ASSEMBLING THE VACUUM CLEANER

Always unplug the appliance before opening it.

1, You can attach the Crevice nozzle brush by pushing it into the suction opening as shown below. It's to clean ceilings, vents, window frames and more.

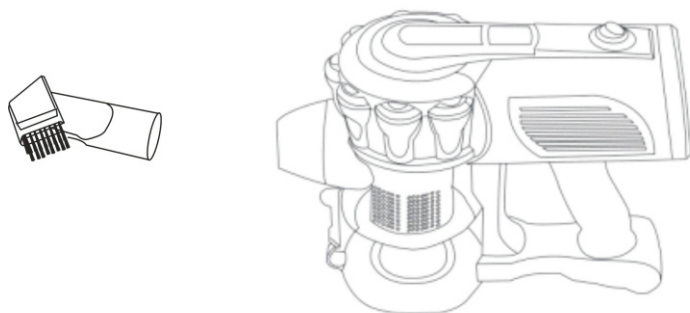

HOW TO USE

1. Make sure that the filter is correctly installed.
2. Make sure the ON/OFF switch is OFF position(turned off).
3. Choose if you want to use the appliance with or without the extension attachment.
4. Insert the power plug into the power outlet.
5. Push the ON/OF switch.
6. Guide the nozzle over the surface to be cleaned, check whether the maximum fill level on the collecting container has been reached. If this is case, it needs to be emptied.
7. After use, push the ON/OFF switch down again and unplug the appliance.

CLEANING AND MAINTENANCE

Before cleaning the appliance, always unplug it and make sure it has completely cooled.

Do not use write brush or any abrasive items or liquids.

Only the dust container and the dust filter can be washed in cold water. Let the parts dry completely before reassembly.(CAUTION!Never use tumble drying or hair dryer).

TROUBLE SHOOTING GUIDE

PROBLEM	POSSIBLE REASON	POSSIBLE SOLUTION
The model will not operate	Power cord is firmly plugged into outlet No power in wall outlet Needs to be cleaned or serviced	Plug unit in firmly Clean filter or call a qualified appliance repair person Empty filter Turn unit off and unplug from wall outlet. Remove filter and check for object(s) that could be blocking air duct and remove. Clean or replace filter
The model will not pick up	Filter is full Unit is clogged Collection container needs to be emptied	
Suction power is weak	Filter is full Unit is clogged Collection container needs to be emptied	
Dust escaping from the model	Filter is full Filter is not installed correctly. Puncture/hole in filter. Filter is blocked	Empty filter Review filter instructions and replace correctly Replace filter
brushes will not pick up	Filter is full	Remove hose and/or brushes. Empty and clean filter Make sure hose and/or brush is properly installed.

DISPOSAL

Environmental Protection

Waste electrical production should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.

WITH REGARD TO THIS MANUAL

This appliance is made in conformity with appropriate European Regulations in force, to protect the user wherever possible from potential hazards. Even if you are familiar with this type of appliance, carefully read this manual before use. Only use this appliance for the purpose it is designed for in order to prevent accidents and damage. Keep this manual close by for future consultation. If you should decide to give this appliance to other people, remember to also include these instructions.

The information provided in this manual is marked with the following symbols indicating:



Danger for children



Danger due to electricity



Danger of damage originating from other causes



Warning of burns



Warning – material damage

INTENDED USE

This appliance is designed only and solely for private use, and is therefore to be considered unsuitable for industrial or professional purposes. You can use the appliance to remove the dust for the surfaces. Do not collect hot ashes, liquids, big glass pieces, rubble, pointy or sharp objects. No other use of the appliance is contemplated by the manufacturer, which is exempt from any liability for all types of damages caused by improper use of the appliance. Improper use also results in any form of warranty being forfeited.

IMPORTANT SAFEGUARDS

READ THESE INSTRUCTIONS CAREFULLY.

- In the event of a leaking battery, do not use the appliance and take it to the nearest authorised Service Centre to replace batteries.
- The appliance is **ONLY INTENDED FOR DOMESTIC USE** and shall not be used for commercial or industrial purposes.
- Do not collect hot ashes, liquids, big glass pieces, rubble, pointy or sharp objects.
- Do not use the appliance without the filters or if the filters are damaged.
- We decline any responsibility resulting from misuse or any use other than those covered in this booklet.
- We suggest you keep the original box and packaging, as our free-of-charge service does not cover any damage resulting from inadequate packaging of the product when this is sent back to an Authorised Service Centre.



Danger for children

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Cleaning and user maintenance shall not be made by children unless they are aged from 8 years and above and supervised.
- Children must be supervised at all times to ensure they do not play with the appliance.

- Do not leave the packaging near children because it is potentially dangerous.
- In the event that this appliance is to be disposed of, it is suggested that the power cord is cut off. It is also recommended that all potentially dangerous components including the power cord are rendered harmless to prevent personal injury. Do not let children play with the appliance or its components.



Danger due to electricity

- Always keep the appliance and the power cord out of the reach of children under the age of 8 years.
- Do not let the power cord of the charger hang in a place where it could be grasped by a child.
- Before plugging the appliance into the mains socket, ensure that the voltage shown on the rating plate placed on the charger matches the local voltage supply.
- The use of extensions not approved by the manufacturer can result in damage to property and personal injury.
- Never put live parts into contact with water: It can cause a short circuit!
- The appliance must not be power supplied by external timers or separate remote-controlled systems.
- During the charge choose an adequately illuminated and clean room with easily accessible power outlet.
- Unplug the appliance when it is not being used and before all maintenance and cleaning operations.
- Do not immerse the appliance in water or other liquids.
- Make sure that your hands are dry before using or adjusting the switches on the appliance, or before touching the plug and power connections.



Danger of damage originating from other causes

- Never leave the appliance unattended when it is connected to the power supply.
- The appliance is not to be used if it has been dropped, if there are visible sign of damage. Do not use the appliance if the power cord or the plug are damaged, or if the appliance is faulty. To prevent any accident, all repairs, including the replacement of the power cord, must be carried out by an Authorised Service Centre or by suitably qualified personnel.
- Do not insert any objects into the openings of the appliance and avoid that any objects obstruct the air flow.
- Keep the openings free of dust, lint, hair, etc.
- Do not use the appliance without the filter.
- Do not collect very hot objects or objects that are smoking or burning such as cigarettes, matches or ashes that are still hot.
- Do not pick up flammable or combustible material (volatile liquids, such as gasoline, kerosene, etc) nor use the appliance in the presence of water.

- Do not use the appliance in closed environments and in the presence of fumes given off by oil-based paints, solvents or waterproofing agents, or by flammable power or other toxic or explosive fumes.
- Do not pick up toxic material (chlorine bleach, ammonia, drain cleaner, acids, etc).



Warning – material damage

- The appliance must be left at rest on a stable surface.
- If the appliance is turned upside down the dust and the dirt can fall out. Make sure that the appliance won't be turned upside down during use.
- Before cleaning shiny surfaces, as parquet or linoleum, check that the brush and its bristles are free from materials that could damage the floor.
- To avoid damaging the floor. Don not insist with the brush on the same area on the delicate surfaces.
- On the waxed surfaces the brush movement can create rings. If this happens clean with a damp cloth, polish with wax and wait for it to dry.
- Do not place the appliance or the charger on very hot surfaces or near open flames to prevent the body from being damaged.
- The cable of the charger must not touch the hot parts of the appliance.
- Do not use the appliance outdoors.
- Do not put the appliance or the charger near or over hot electric stoves or burners or near a microwave oven.
- Do not leave the appliance and the charger exposed to weathering (rain, sun, etc).



To dispose of product correctly according to European Directive 2012/19/EU, please refer to and read the provided leaflet enclosed with the product.

• SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE

DESCRIPTION OF THE APPLIANCE

- | | |
|--|---|
| 1 Motor body release button | 12 Unlocking button of the dust collector |
| 2 Tube | 13 Dust collector |
| 3 Brush release button | 14 Wall bracket |
| 4 Motorized brush with bristles roller | 15 Handle |
| 5 Nozzle | 16 Battery release button |
| 6 Fabric brush | 17 Removable battery |
| 7 Dust collector door | 18 Charge indicator |
| 8 Dust collector door release button | 19 Charger access |
| 9 Motor body | 20 Charger |
| 10 Speed control button | 21 Screws (x 2) |
| 11 ON/OFF button | 22 Wall plugs (x 2) |

Identification data

On the label under the base of the appliance are reported the following identifications data of the appliance:

- manufacturer and CE marking
- model (Mod.)
- serial number (SN)
- electrical supply voltage (V) and frequency (Hz)
- electrical power consumption (W)
- assistance toll-free phone number

When ordering at Authorized Service Centers, indicate the model and serial number.

HOW TO CHARGE THE BATTERY

Before connecting the charger to the electric grid check that the voltage reported on the label under the charger corresponds to that of the local grid.

This appliance can be charged only with the provided charger.



Warning!

Before using the appliance for the first time charge it completely.

The battery must be recharged with the battery disconnected from the body of the appliance.

Remove the packaging materials from inside and outside of the appliance. Remove all the stickers. Place the motor body on an horizontal surface.

Press the release button (16) to remove the battery from the body of the appliance (Fig. B).

Plug the charger cable into the input (19) on the battery (17).

Plug in the charger.

The charge indicator (18) turns on in blue colour and blinks. When the charge indicator comes to a steady light, the battery is completely charged.

Disconnect the charger from the socket. Unplug the charger from the battery.

Place the battery into the body of the appliance (Fig. B) and check it is correctly locked into place.

INSTRUCTIONS FOR USE

Grab the motor body (9) by the handle (15).

Assemble the tube (2) on the motor body until you hear the click of the release button of the motor body (1) (Fig. C).

Assemble the tube on the brush (4) until you hear the click of the release button of the brush (3) (Fig. D).



Warning!

Appliance fall danger. The appliance, once that it is assembled, cannot stand on the brush in vertical position.

Press the ON/OFF button (11).

Press the speed control button (10) to select the desired speed (Fig. E). Two speeds are available: when the appliance is turned on, the speed is set to the minimum level. To switch to maximum speed, press the speed control button (10).



Warning!

Switch the appliance off immediately in the event that something gets trapped inside the brush, such as a piece of cloth, the fringes of a carpet, etc. Before turning on the appliance again, remove anything that caused the obstruction of the aspiration ducts.

When the dust reaches the MAX lever you need to empty the dust collector (13).

Press the ON/OFF button (11) for 2-3 seconds to turn off the appliance.

Press the release button of the motor body (1). Disassemble the tube.

Take the motor body on a trash bin. Press the release button of the dust collector lid (Fig. F). Empty all the dust (Fig. G).

Close the dust collector lid.

When the last remaining bar of the battery charge indicator starts flashing, the battery is low and shall be recharged.

The appliance can be used with the tube and the brush or with the brush built directly on the motor body (Fig. H).

USING THE ACCESSORIES

The appliance is equipped with various accessories:

- A brush with bristles roller (4), particularly suitable for deep cleaning of rugs, carpets and floors.
- A fabric brush (6), particularly suitable to vacuum dirt from fabrics, sofas, but also horizontal surfaces.
- A crevice nozzle (5), particularly suitable to vacuum in the most hidden corners and narrow slots.

The accessories can be built on the tube to reach the highest points.

The accessories can be built directly on the motor body to clean the windows and the interior of the car.

AFTER USING

Press the ON/OFF button (11) for 2-3 seconds to turn off the appliance. Empty the dust collector.

Disassemble the motor body from the tube.

Put the appliance in a dry place and away from the reach of children.

Alternatively, use the wall mount to fasten the appliance to the wall. The wall bracket (14) is supplied with screws (21) and wall plugs (22).

Place the wall mount against the wall. Adjust the height of the wall mount according to the height of the appliance. Using a pencil, make marks on the wall in line with the three holes of the wall mount. Remove the wall mount. Drill the wall in line with the marks. Insert the supplied wall plugs (22) into the holes.

Place the wall mount on the wall keeping the holes in line with wall plugs. Insert the supplied screws (21) into the holes. Tighten the screws with a screwdriver.

Fasten the appliance to the wall mount (Fig. L).

APPLIANCE CLEANING



Warning!

All cleaning operations described below must be carried out with the appliance off and with the plug disconnected from the outlet. Never immerse the motor body and the charger in water or other liquids. Do not use direct jets of water.



Warning!

Regular maintenance and cleaning preserve and maintain the appliance efficient for a longer period.

 
The dirt enters the dust collector (13).

The air is then cleaned by a fabric filter. The fabric filter is in turn placed into a primary metal filter. Both filters are located inside the dust collector.


In addition there is a HEPA air outlet filter, located in the upper part of the motor body.



Fabric filter



Metal filter

 

HEPA air outlet filter

**Warning!**

Never use the appliance without a filter or with a damaged filter. The aspired dust could go inside the appliance and damage the motor.

Appliance body cleaning**Warning!**

Clean the fixed parts of the appliance using a non-abrasive damp cloth to prevent damaging the body.

Cleaning the motorized brush with bristles roller

Do not lubricate or grease the rotating parts to avoid that hair and lint gets stuck.

The bristles roller (4) can be removed from its seat to clean the bristles.

Remove the brush (4) from the tube. Press the brush release button (3).

Turn the brush upside-down. There is a locking hook on one side of the brush (Fig. I).

Lift the locking hook (Fig. J).

Lift the bristles roller on the locking hook side (Fig. K). Remove the bristles roller completely.

Clean the bristles from the dirt.

To reassemble the bristles roller in the motorized brush, first insert the side opposite the locking hook.

Lower the roller on the side of the locking hook and insert the motorized brush support vertically into its seat.

Reinsert the locking hook.

HEPA air outlet filter cleaning

The HEPA air outlet filter, located in the upper part of the motor body. It can be removed by pressing the side buttons (Fig. M).

The Hepa filter is a high efficiency filter which removes the impurities and filters particles and bacteria.

Often change the Hepa filter (every 4-6 months) to avoid the circulation of the bacteria in the air.

**Warning!**

Wash the air outlet filter only with clean water without soap or detergent.

Wait until the air outlet filter is completely dry before inserting it into its seat.

Cleaning the fabric filter and metal filter

Take the motor body on a trash bin. Press the release lever of the dust collector door. Remove all the dust.

Press the release button of the dust collector. Remove the dust collector from the motor body.

Remove the filters from the dust collector (Fig. N-O). The fabric filter can be easily removed from the tank even without opening the dust collector.

Correctly clean the filters by removing dirt or washing them.

**Warning!**

Only wash the filters with clean water without soap or detergents.

Wait until the filters are completely dry before inserting them into the housing.