

SOKANY®

SK-14019

HAIR DRYER

INSTRUCTION MANUAL



220-240V 50/60Hz 2400W MADE IN P.R.C

RoHS EAC  CE    

Preface

Before using this product, please read this manual carefully. Do not disassemble or modify the product to avoid any harm. If you need to repair the product, please contact a professional technician.

Product Features

1. Three-speed wind speed and three temperature settings, simple and easy to operate, suitable for different hair types.
2. With negative ion function, reducing static electricity, making hair softer and smoother.
3. 2400W high power, providing strong wind speed and fast drying.
4. Built-in overheating protection, safe and reliable.

Technical Specifications

- **Product Name:** High-Speed Hair Dryer
- **Rated Voltage:** 220~240V
- **Rated Frequency:** 50/60Hz
- **Rated Power:** 2400W
- **Product Size:** 28 x 9.5 x 7.5 cm
- **Product Model:** XI-06Pro
- **Product Certification:** GB4706.1-2005, GB4706.15-2008, GB4343.1-2018, GB17625.1-2012

Product Introduction

1. **Switch Button:** On/Off
2. **Wind Speed Button:** Adjust wind speed
3. **Temperature Button:** Adjust temperature
4. **Air Outlet:** For airflow
5. **Air Inlet:** For air intake

How to Use

- Before using this product, please make sure the switch button is set to the (O) off position. Plug the power cord into the outlet and set the desired wind speed/temperature using the wind speed/temperature buttons.
- Choose the appropriate wind speed/temperature.
- When using, please keep the hairdryer nozzle at least 10 cm away from the hair to avoid overheating and hair damage. Keep the hairdryer outlet at least 3 cm away from the scalp to avoid burns.

- After use, turn off the switch, unplug the power cord, and store it in a dry place after cooling down completely.

Installation and Disassembly of the Air Nozzle

- Installation method: Align the air nozzle with the air outlet, the magnet will automatically attract the air nozzle, allowing it to rotate 360° freely.

Maintenance and Care

1. Do not use solvents, abrasives, or other chemicals to clean this product to avoid damaging it.
2. When cleaning, make sure the switch is turned off and the power cord is unplugged.
3. Use a soft cloth to wipe the surface of the product and the air inlet/outlet to avoid damage.
4. Regularly use a brush to remove any hair or debris from the air inlet and outlet.

Precautions

1. Please read this manual carefully before using the product.
2. Make sure the power supply voltage matches the voltage indicated on the product. Any improper voltage may cause damage to the product and void the warranty.
3. Do not use the product near water, such as bathtubs, sinks, or other containers filled with water.
4. When using, avoid covering the air outlet and air inlet to prevent overheating.
5. Do not insert any objects into the air outlet or air inlet to avoid electric shock or fire.
6. If the product is damaged, please stop using it immediately and contact a professional technician for repair.
7. Do not use the product if it is damaged or malfunctioning.