

SOKANY[®]

HOT AIR COMB


SK-15006



220-240V 50/60Hz MADE IN P.R.C

RoHS EAC  CE    

Hot Air Styler Instruction Manual

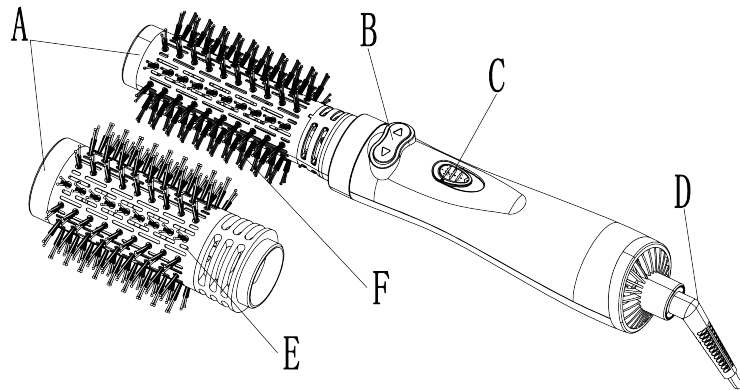

- A: Button for accessory**
B: Rotation button
C: Power button
D: Swivel power cord
E: 50MM AL tube brush
F: 38MM brush

Ratings:

220-240 V 50/60Hz 1200W

HOW TO USE YOUR HOT AIR STYLE

1. Always ensure the switch is set to OFF(0) position before plugging the unit into the power outlet.
2. Use the high setting for drying hair, and use low setting for styling.
3. If the hair dryer stop for any reason, turn it off at once and let it cool down.

Switch control:

Switch setting:

0=OFF Position

※= Cold Air Position

1= Low Temperature Position

2= High Temperature Position

CLEANING AND CARE:

1. Keep the accessories such as concentrator from the hair dryer when don't use the product.
2. Keep the air intake net clean, frequently remove hairs, dust will adhere to the net.
3. Keep the hair dryer staying at dry place.

Dear Customer:

Please read this user manual carefully before using your air style, paying particular attention to the safety notes on this and the following page! Keep the user manual safe for future reference and also to pass on to any subsequent owner.

Air style:

It has 2 changeable accessories to style your hair easily; it is powerful enough to dry your hair, at the same time it styles.

Changing accessories:

Fitting:

-Push the button and place the accessory you wish into the unit until you hear a click.

Removing the brush:

-Push the button and remove the accessory you require from its recess.

Reminder:

The brush accessory is very hot when in use. Be careful when removing it.

AL tube brush 38mm brush:

Negative ions can let hair straight, repair hair squama, looks elegant. The brush let you dry and style your hair at the same time, giving a perfect result both at the front and at the back of your hairstyle. It has rotational function, especially designed so that you can blow dry your hair effortlessly and in a single move—quicker and easier than traditional blow drying.

Safety cautions:

1. Do not block the air intake or outlet areas during use. Blocking the air flow can result in overheating which may cause burns or mechanical damage. Rolling too large a bunch of hair around the brush will not allow proper curling and also block the air outlet.
2. If the air intake is blocked by the hand during use, for example, the thermal switch may function and turn off the device. This does not mean the device has been damaged and it should shortly return to normal. However, repetition of this sequence can result in damage.
3. When the styler is switched on, do not leave it near bedding, paper or other combustible objects. Also, do not use the styler near gas or other highly combustible items.
4. Avoid dropping or subjecting the device to excessive shock. Do not pull the cord with unnecessary force.
5. After use, switch the styler off then unplug the cord from the receptacle.
6. Wipe the housing clean with neutral detergent. Do not use thinner or benzene. Do not directly apply hair oils or lotions to the brush or comb. (Indirect contact from the hair is permissible.)
7. Do not store near such cosmetics as they may deform the housing, comb and brush.
8. Do not use in a bath area or with wet hands. Do not store in a damp area.
9. If damage occurs during use, the motor does not function properly, the warm air flow stops, or other abnormality occurs, cut off the power supply immediately and have the device repaired by an authorized repairman. Do not tamper with the inner mechanism.
10. For additional protection, the installation of a residual current device (RCD) with a rated residual operating current not exceeding 30mA is advisable in the electric circuit supplying the bathroom. Ask your installer for advice.
11. When the hairdryer is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the hairdryer is switched off; Do not use this appliance near bathtubs, basins or other vessels containing water.
12. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
13. Children should be supervised to ensure that they do not play with the appliance.
14. Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, and the like.
15. While using the appliance, keep your hair away from the air inlets.

Direction of rotation:

This function enables you to automatically wind the section of hair around the brush to blow dry your hair effortlessly.

-To start rotation, press the rotation button in the desired direction of rotation (right or left).

-Keep pressing the switch while blow drying.

-To stop rotation, release the rotation button.

WARNING:

1. Do not use this appliance near water, do not use the appliance with wet hands.
2. Do not use this appliance near bathtubs, showers, basins or other vessels containing water.



3. When the hairdryer is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the hairdryer is switched off.

4. For additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.

5. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

MAINTAIN

IMPORTANT: Always ensure that hair dryer is disconnected from the mains supply before cleaning.

Use a damp cloth for cleaning and wipe dry. This will help preserve the original finish of your hair dryer. Abrasive cleansers should not be used.

WARNING: Never immerse the hair dryer in water and always ensure that plug is kept dry. After a while of use, you should take the inlet apart and clean it. Operate method:

Push the air inlet grille, then move to the left until it is out of the hair dryer. After finishing clean, please insert the air inlet grille into the tail of the hair dryer and move to the right until locked at the right position. Frequently clean out any hair or fluff that becomes stuck in the inlet filter. To clean may result in overheating.