

SOKANY®

SK-15026

HAIR STRAIGHTENER

INSTRUCTION MANUAL



CONTENT

EN / ENGLISH ----- 01-04

EN / ENGLISH

STEAM STRAIGHTENER

Steam straightener is a professional hair straightener with steam function. The large amount of steam combined with smooth glide titanium plates can effectively increase the moisture and brightness of hair, even the stubborn hair can be straightened in one pass.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING

KEEP AWAY FROM WATER

SAFETY PRECAUTIONS

•WARNING: The polyethylene bags over the product or its packaging may be dangerous. Keep these bags out of the reach of babies and children.

Never use them in cribs, children's beds, pushchairs or playpens. The thin film may cling to the nose and mouth and prevent breathing. A bag is not a toy.

•WARNING: Do not use this appliance near bathtubs, showers, basins or other vessels containing water.

1. If you are using the unit in a bathroom, unplug it after you have finished using it. Using the unit close to a source of water can, in fact, be dangerous, even if the unit is switched off. To ensure additional protection, have installed in your bathroom a residual current device (RCD) with a nominal trip current no higher than 30mA. Ask your electrical fitter for advice.

2. Never immerse the unit in water or any other liquid.

3. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

4. Do not use the unit if it has fallen or if it appears to be damaged.

5. Do not leave the unit unattended when it is plugged in or switched on.

6. Unplug the unit immediately if you have problems when using it.

7. Do not use any accessories other than those recommended by manufacturer.

8. Unplug the unit after each use and before cleaning it.


9. Avoid any contact between the unit's hot surfaces and your skin, in particular, your ears, eyes, face and neck.

10. This unit is not intended for use by people (including children) with reduced physical, sensory or mental capabilities, or by persons who lack experience or knowledge, unless they are supervised or have been given instructions beforehand on the use of the unit by a person responsible for their safety. Children should be supervised to make sure they do not treat the unit like a toy.

11. Allow the unit to cool before storing.

12. To prevent damage to the cord, do not wrap it around the unit and ensure it is stored without twisting or folding it.

FEATURES

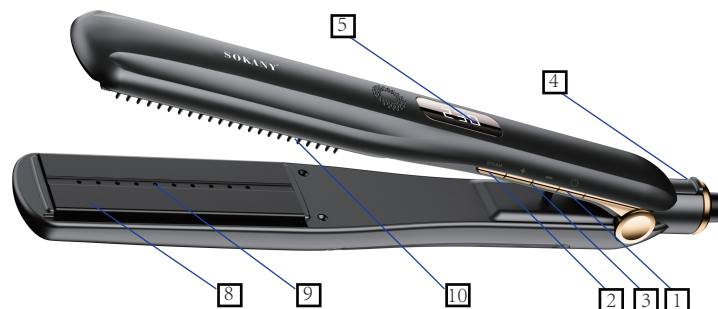

1. On/Off button
2. Steam function On/Off button
3. Temperature adjustment button
4. Hinge lock switch
5. 5 heat settings with LED indicator - 140°C, 160°C, 180°C, 200°C, 220°C
6. Straightener with 10ml capacity water reservoir
7. Straightener water reservoir release switch
8. Flexible titanium cushion plates, 105mm x 36mm max wide straightening plates
9. Steam vents on bottom plate
10. Removable detangling comb

WATER RESERVOIR INSTRUCTIONS

- Before styling, release the water reservoir by pulling down the release switch.
- Carefully open the rubber cap and fill with distilled water, then tighten the rubber cap.

- Replace the water reservoir onto the straightener and check that it is locked securely into place.
- Check the outside of the water reservoir and straightener are completely dry. If you need to refill a second time, unplug the straightener and reinstall the water reservoir immediately after you have refilled it.

NOTES

- Before filling with water, ensure the black rubber plug on the bottom of the base station is secured tightly closed.
- We recommend using distilled water as this will help protect the appliance best & lessen the chance of clogging the inside mechanism that allows the steam to flow through.
- Do not tilt or invert the water station to prevent water leakage.
- You can place the straightener onto the base station whenever the plates in close or open position. However, if the straightener is switched on, we recommend locking the plates to avoid hot surface or steam coming into contact with the skin.
- Always remove excess water from the straightener water reservoir and base water station after use, since leaving unused water in the reservoirs can cause clogging over time.

BEGIN TO USE

- Plug your straightener into a 110-240V power outlet.
- Press the On/Off " " button to turn your straightener on. The default 140°C LED indicator will illuminate & start to flash. At this point the straightener will start heating up.
- Press the "+" button to adjust to your desired temperature indicated on the LED display. Once the temperature you have selected has been reached, it will then stop flashing on the display. Please select the suitable temperature according to the user's hair type.

Temperature	Hair type
140°C	Delicate, fine, bleached hair
160°C	Average, colour-treated hair
180°C	Wavy, curly hair
200°C	Hard to style, thick hair
220°C	Coarse, afro-textured, difficult to style hair

- If using the steam function, press the steam "STEAM" button once to switch on the steam function. The steam LED indicator will illuminate. Note: When using the steam function & the plates are closed, the straightener will make a clicking sound. This is completely normal & part of standard operation as the pump is pushing the water through the inside mechanism.
- After use, turn your straightener off by pressing the On/Off button.

WARNING

- Take care to avoid the hot surface of the appliance coming into direct contact with the skin, in particular the eyes, ears, face and neck.
- Do not touch the hot plates or metal parts of the appliance whilst hot.
- Avoid directing steam toward face and neck.

STYLING SUGGESTIONS

- Ensure hair is dry and combed through to remove any tangles. Divide the hair into sections ready for styling.
- Place a section of hair between the straightening plates, close to the roots.
- Hold the hair firmly between the straightening plates and slide down the length of the hair from root to tip.
- Repeat for each section of hair.
- Allow the hair to cool before combing through.
- After use, press the on off button to switch off, unplug the appliance.

AUTO SHUT OFF

This appliance has an automatic shut off feature for added safety. If the appliance is switched on for more than 60 minutes continuously, it will automatically switch off. If you wish to continue using the appliance after this time, simply press the "on off " button to turn the power on again.

INSTRUCTION OF REMOVABLE COMB

- Make sure the appliance is cool before inserting or removing the straightening comb attachments.
- Insert the edge of the straightening comb attachment into the groove by the side of the straightener plate with the bristles facing upwards.
- Slide the comb towards the opposite end of the appliance until it fits in to place.
- To remove the straightening comb attachment, simply slide it away from the appliance.

Never allow the power supply cord to be pulled, twisted, or severely bent, causing it to rupture and short circuit. Inspect the cord frequently for damage. Stop use immediately if damage is visible or if unit stops or operates intermittently.

MAINTENANCE OF TITANIUM COATED PLATES

The material of titanium coating is hard, flawlessly smooth and non-sticky so that you can clean them easily by wiping with a damp cloth. Basically, no special care and maintenance is needed. However, in order to keep the best performance of your styler all the time, please note the following care instructions.

- Do not scratch the surface of titanium coated plate with sharp objects or wipe with coarse materials.
- Do not use this appliance with strong chemicals, like perm lotion.
- Do not clean the titanium coated plate with strong cleaning agent. In most cases, mild detergent will be able to remove any stains or trace of styling products left on the plate easily.

STORAGE

When not in use, your appliance is easy to store. Allow appliance to cool, then simply store out of reach of children in a safe, dry location. Do not jerk or strain cord at plug connections. Allow the cord to hang or lie loose and straight at the point of entry into the appliance.