

SOKANY[®]

2 IN 1 BLENDER

MODEL:SK-163
INSTRUCTION MANUAL



220-240V 50/60Hz 500W MADE IN P.R.C



CONTENT

1. Introduction du produit

1. This 2 in 1 Blender is our entry level blender, but is one of our best blenders ever made. A powerful 500W motor combined with blender and grinder jars means all your basic needs are taken care of.

Specification

Voltage: 220-240V

 
Rated Frequency: 50/60 Hz

Rated Power: 500W

2. General Description

Parts List

- | | |
|------------------|----------------------------|
| 1. Main Body | 6. Silicone Seal |
| 2. Power Knob | 7. Blender Blade & Housing |
| 3. Measuring Cup | 8. Grinder Jar |
| 4. Blender Lid | 9. Grinder Blade & Housing |
| 5. Blender Jar | |

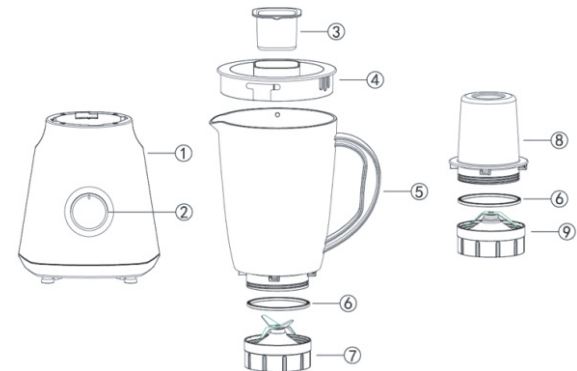

3. Important

- Before you connect the appliance to the power, make sure that the voltage indicated on the bottom of the appliance corresponds to the local power voltage.
- Do not wash or immerse the appliance into water or other liquid when in use.
- The cord, plug and motor base cannot be washed or submerged into water or other liquids. The plugs must not be wiped with a damp cloth.
- This appliance is intended to be used in household and similar applications such as: staff kitchen areas in shops, offices, farm houses, by clients in hotels, motels and other residential type environments, bed and breakfast type environments and other working environments.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- If power cord is damaged, please replace it at an authorized Clikon service center.
- Never leave the appliance unattended while it is in operation.
- Never place your hands into the jars while they are attached to the main body. Ensure that the power is turned off before removing the jars.
- Do not let the power cord hang over the edge of a table or counter, or come into contact with any hot surface as it may damage the cord.
- Do not operate the appliance if your hands are wet.
- Never unplug the appliance from the socket by pulling on the cord. Always unplug by gripping the plug itself and removing carefully.
- Ensure that the appliance is switched off before changing accessories or removing any parts.
- Care shall be taken when handling the sharp cutting blades, emptying the bowl and during cleaning.

4. Read Before Use

- Never fill the blender jar with any ingredients hotter than 80°C.
- Always ensure that the blender/grinder lids are correctly locked in place on the jars and that the measuring cup is in place before switching on the appliance.
- When filling in liquids in the blender jar, take care not to exceed the maximum level. Doing so can cause the liquid to spill or spray out of the jars and may cause injury or harm."
- Ensure that the appliance is switched off and unplugged after every use.
- Always clean the appliance after use in order to ensure that the appliance stays in good working condition.

- Please do not operate the blender for more than 1 minute of continuous use, or risk overheating the appliance. Allow the blender time to cool down in between uses.
- Please do not operate the grinder for more than 30 seconds of continuous use, or risk overheating the appliance. Allow the blender time to cool down in between uses.
- If the blender or grinder blades get stuck or stop working, please stop the motor immediately and contact an authorized Clikon service center for help.
- If the grinding blade is running without touching the food, please unplug the power, disassemble the grinding cup, shake the food and start grind function again.
- After grinding is finished, do not disassemble the grinding cup until the motor stops

5. Operation

This blender is fitted with two safety features: one which safeguards against excessive loads and another for safety of the user.

In case of overloading, the blender will automatically cut off so that no damage to the appliance occurs. If this occurs, turn the power knob back to 'O' and allow the blender some time to cool down to room temperature before using it again.

The built in switch ensures that the appliance will not work until the blender jar is locked in place. This is to make sure that no injury or harm can come when the motor is visible. For directions on use and operation of the blender, please refer to the diagrams below. Before use, please ensure all packaging materials are removed from the appliance.

Blending

1. Place the Silicone Seal onto the Blender Blade Housing (Fig 1.).
2. Fit the Blender Jar onto the Blender Blade Housing (Fig 2.).
3. Add the ingredients into the Blender Jar. Please note that for optimum performance, it is recommended that ingredient size should be no more than 2 cm3.
4. Lock the lid into place on the jar and ensure that it is secure (Fig 3.).
5. Next, place the jar onto the main body and twist it to lock. Once the jar is locked, turn the Power Knob to the desired setting (Fig 4.).
6. Once finished, turn the Power Knob back to the 'O' position and remove the plug from the wall socket (Fig 5.).

Grinding

1. Add the ingredients into the Grinder Jar. Fit the Grinder Jar onto the Grinder Blade Housing and lock in place. (Fig 6.).
2. Next, place the jar onto the main body and twist it to lock. Once the jar is locked, turn the Power Knob to the desired setting (Fig 7.).
3. Once finished, turn the Power Knob back to the 'O' position and remove the plug from the wall socket (Fig 8.).

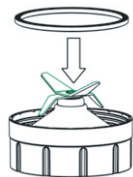 


Fig 1.



Fig 2.



Fig 3.



Fig 4

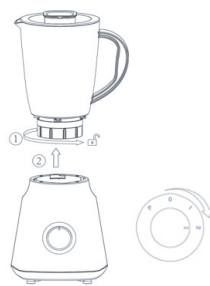 


Fig 5



Fig 6

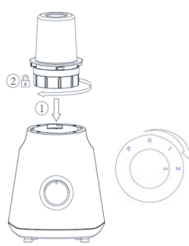 


Fig 7

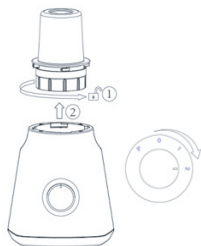 


Fig 8

6. Maintenance

Always unplug the appliance from the wall socket before cleaning the unit.

- Detach the jar from the main unit.
- Open the lid and remove the contents.
- Unscrew the blade housing from the jar in order to access the blade for cleaning and for easier access to the jars.
- Clean the jar and blade housing with soapy water and then rinse it thoroughly.
- Wipe the parts down with a soft & dry cloth.
- Never immerse the main body into water or any other liquid. Only clean the main unit with a damp cloth.
- For long life of the blender, it is recommended to clean the appliance after every use.