

SOKANY

INSTRUCTIONS FOR USE

MODEL NO.:SK-19015

Dear Customer,
Please read these Operating Instructions through carefully before connecting your device to the mais, in order to avoid damage due to incorrect use.
Please pay particular attention to the safety information. If you pass the device on to a third party, these Operating Instructions must also be handed over.


TECHNICAL DATA

VOLTAGE: AC220-240V 50Hz
POWER: 60W

FEATURES:

- 3 Speed Control
- Oscillation over a wide angle.
- Height adjustable stand for precision airflow.

PARTS DIAGRAM

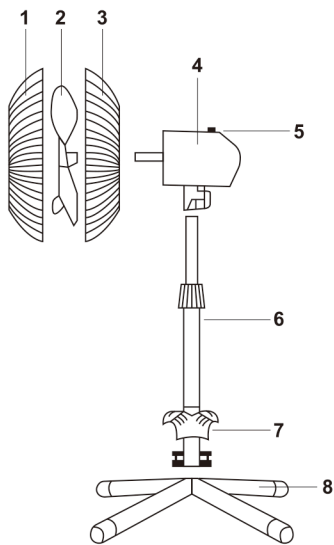

1	Front grill
2	Blade
3	Rear grill
4	Motor
5	Switch
6	Stand
7	Base cover
8	Base

ASSEMBLY INSTRUCTION

- Assemble the 4 rods together to make the base.
- Fasten the stand to the base.
- Slide the base cover down the tube to the base.
- Place the motor assembly firmly on the top of the stand with the screw.
- Secure the rear grill to motor housing with screw.
- Insert the blade onto the motor shaft by matching the screw.
- Position the front grill with center to clips.

OPERATING INSTRUCTIONS

- Connect the power plug to a suitable outlet.
- Speed control: turning the position switch for three speeds. Select the desired speed by pressing the switch **0/1/2/3**.
0 = Device off
1 = Low speed
2 = Medium speed
3 = High speed
- To make the fan oscillate form side to side, push the oscillation knob down provided on the motor rear housing. To stop oscillation the fan head, pull up the oscillation knob.

CAUTION: THE FAN MUST NOT BE CONNECTED TO ELECTRIC MAINS SUPPLY DURING ASSEMBLY.

WARNING:

- Do not touch the blades with hand or hard object before the fan comes to a standstill, in case of accident happen.**
- Do not pull the power cord too hard, lest it fall off.**
- If the cord of this appliance is damaged, it must only be replaced by repair shop appointed by the manufacture.**
- Before cleaning disconnect from power. Take off the front guard and blade. Use soft cloth erase oil stains. Please don not bump the blade or alter their angles.**