

SOKANY[®]

HAIR STRAIGHTNER

MODEL:SK-1916

INSTRUCTION MANUAL



220-240V 50/60Hz 45W MADE IN P.R.C

RoHS EAC      

Name: Hair Straightner
Model: SK-1916

Rated Parameters

Voltage: 220-240V~
Frequency: 50/60Hz
Power: 45W

Instruction

This new hair straightener provides ultra-fast super-smooth straightening results. The ceramic plates ensure ultra-smooth gliding through the hair and obtain optimal results for your hair.

Important

Read these instructions for use carefully before using the appliance and save them for future reference.

- 1.Put the plug into a suitable socket. Note the nominal voltage:220-240V,50/60Hz
- 2.Temperature capacity max.: 230°C
- 3.This appliance gets very hot. Prevent the hot surfaces of the appliance from coming into direct contact with the hands, eyes, ears, face and neck. Do not touch the straightening plates when the appliance is switched on. Except the use of cold range, the plastic parts near the straightening plates also become very hot during use.
- 4.Keep the straightening plates clean and free of dust, dirt, styling spray and gel. Never use the appliance in combination with styling mousse, styling spray, gel, etc.
- 5.If the main cord is damaged, it must always be replaced by the manufacturer or a service center authorized by the manufacturer in order to avoid hazardous situations.
- 6.Always unplug the appliance after use.
- 7.Wait until the appliance has cooled down before storing it.
- 8.For additional protection the installation of a residual current device (RCD) with a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.
- 9.This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children less than 8 years.



WARNING: Keep this appliance away from water. Do not use this appliance near water and bathtubs, showers, basins or other vessels containing water.

Styling your hair

Washing your hair

1. When washing your hair, wet your hair thoroughly for 30-60 seconds.
2. Pour some shampoo into the palm of your hand .Spread it between your hands and distribute it evenly through the hair.
3. Gently massage your hair and scalp. Do not rough up the hair or pull long hair up onto the scalp, as this may cause tangles.
4. Massage your scalp with your fingertips .This stimulates blood circulation and is gentler to the hair cuticles.
5. Rinse your hair thoroughly, as poor rinsing can result in dull hair. Finish with a cold rinse for extra shine.

Drying your hair

- 1.After washing, squeeze excess water out of the hair with your hands and then towel-dry the hair. Use a comb to disentangle hair gently from the roots to the tips.
- 2.Divide the hair into sections by means of clips, starting at the back.
- 3.Dry each section by pulling a straightening brush down the hair length while following the brush with the hair dryer, with its nozzle pointing towards the hair ends.
- 4.When you have finished drying each section, set the hairdryer to the cold setting for a final cold shot. This unwrinkles the cuticles and leaves your hair glossier.

Straightening your hair

If you use the straightener incorrectly or if you use it at the wrong temperature, you could overdry your hair or even burn it. Always select a low heat setting when you start using the straightener for the first time.

- 1.Insert the plug into the wall socket.
- 2.Press the on/off button.
- 3.Wait until the appliance has reached its operating temperature.
- 4.Comb or brush your hair so that it is disentangled and smooth.
Use a comb to divide the hair into sections. Do not put too much hair in one section.
- 5.Take a section that is not wider than 5 cm. Place it between the straightening plates and press the handles of the appliance firmly together.
- 6.Slide the straightener down the length of the hair for 5 seconds, from root to hair end, without stopping to prevent overheating.
- 7.Repeat this process after 20 seconds until you have achieved the desired look.
- 8.Allow your hair to cool down. Do not comb or brush it before it has cooled down, as this would ruin the hairstyle you have just created.

Cleaning

- 1.Switch the appliance off by pressing the on/off button.
- 2.Unplug the appliance.
- 3.Let the appliance cool down completely on a heat-resistant surface.
- 4.Do not dip the appliance into water.
- 5.Clean the appliance with a damp cloth.

Storage

- 1.Make sure the appliance is unplugged.
- 2.Let the appliance cool down on a heat-resistant surface before storing it.



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.