

SOKANY[®]

HAIR DRYER

MODEL:SK-2226



220-240V 50/60HZ 3000W
MADE IN P.R.C

HAIR DRYER

Specifications:

220V-240V~ 50/60Hz

General Safety Instructions

- If the supply cord is damaged, contact your manufacture. Please do not try to repair the appliance if it is critically damaged do not attempt to use the device.
- This appliance should stay out of reach of children and anyone who is not capable of using electrical appliances.
- When the hairdryer is used in a bathroom unplug it immediately, you may run the risks of electrocution due to humidity and water residue.
- For additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30mA is advisable in the electrical circuit supplying he bathroom. Ask your installer for advice



WARNING: Do not use this appliance near bathtubs, showers, basins or other vessels containing water.

- This appliance is applied for the power of 220V-240V~
- Do not use this device near water or any other fluids, do not attempt to grab the appliance if it is in water, carefully unplug the device.
- Do not put the dryer on the damp surface or cloth when it is turned on
- Do not cover the intake opening or exhaust.
- This appliance features an over heat setting in which the power will turn off automatically when the appliance is too hot. Please push the switch button to 0 after and let it cool after several minutes.
- Please pull out the plug under following cases:
 - abnormal running
 - need cleaning
 - after use

WARNING:

- If the supply cord is damaged, contact the manufacturer for further warranty instructions do not attempt to repair.
- When the hairdryer is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the.
- Do not use this appliance near water or any other fluids.
- Do not use this appliance near water in bathtubs, showers, basins or other vessels containing water.

USE:

1. Please check the outlet of socket and whether it accords with this product before use.
2. There may be several smoke sprayed out when first use, but it does not mean damage, without any dangerous.
3. The switch shelves can be adjusted to the highest when your hair is wet.
4. Adjust the shelves to low if your hair is dry or damaged to avoid excess damage.

Maintenance:

1. Avoid the twisting the wire will using.
2. Pull out the plug, let it cool and use a damp dishcloth to clean the surface, do not pour any liquid into the machine.
3. Store the dryer in a safe and cool place away from liquids. Do not mistreat the cord because it can result in electrical issues.