

SOKANY[®] COFFEE MAKER

MODEL:SK-506E
INSTRUCTION MANUAL



220-240V 50/60Hz 950W MADE IN P.R.C

RoHS



CONTENT

INSTRUCTION MANUAL

Voltage: AC220-240V

Power: Heater: 830-1086W, Motor: 200W

Frequency: 50/60Hz

Rated capacity: 1800ml

READ THIS MANUAL PRIOR TO FIRST USE AND SAVE FOR FUTURE REFERENCE.

IMPORTANT SAFEGUARDS:

When using electrical appliances, basic safety precautions should always be followed including the following:

1. Read all instructions.
2. Do not touch hot surfaces.
3. To protect against fire, electric shock and injury to persons, do not immerse cord, plugs or coffee brewer in water or other liquid.
4. Never leave the appliance unattended when in use. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use, allow to cool before putting on or taking off parts, and before cleaning the appliance.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Call our toll-free Customer Assistance Number for examination, repair or adjustment.
7. The use of accessory attachments is not recommended by the appliance manufacturer and may result in fire, electrical shock or personal injury.
8. Do not use outdoors. (This product is designed for a specific purpose. Please do not use it outdoors)
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place cord on or near a hot electric or gas burner, or in a heated oven.
11. Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn control to off, then remove plug from wall outlet. (Only used for detachable equipment supply line), Do not pull the power cord directly.
12. Do not use this appliance for anything other than its intended use.
13. Coffee brewer use location:

A. To reduce the risk of fire or electric shock, do not place the coffee brewer above any electric heat source or gas.

B. To reduce the risk of fire, do not place the machine anywhere in the heating unit or cook near the machine.

14. Scalding may occur if the lid is removed during the brewing cycles.

15. Do not attempt to operate the appliance without putting water in the coffee brewer.

16.FOR HOUSEHOLD USE ONLY.

CORD SAFETY

- A short power-supply cord is provided to reduce risk of becoming entangled in or tripping over a longer cord.
 - Extension cords may be used if care is exercised in their use.
 - If an extension cord is used:
 - a.The marked electrical rating of the extension cord should be at least equal to the electrical rating of the appliance
 - B.The longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over.
- If the plug does not fit securely into the outlet, reverse the plug and re-insert. If it still does not fit, contact a qualified electrician for assistance. Do not modify the plug in any way.

Attention: This device is strictly prohibited for use by children or persons who are unwell, mentally ill or inexperienced, and who have not read the instructions carefully, unless they are supervised or directed to use the device by a detailed reader and someone have their safety.

Children should be supervised to ensure they do not play with equipment.

OperatingCoffee Brewer-- BEFORE FIRST USE

1. Check that all accessories and machines are in good condition. Please clean the dismountable filter and mesh thoroughly with warm water before using.

2. Getting to know your control panel.(Figure 1)

To know your machine for each parts (Figure 2 & (Figure 3)

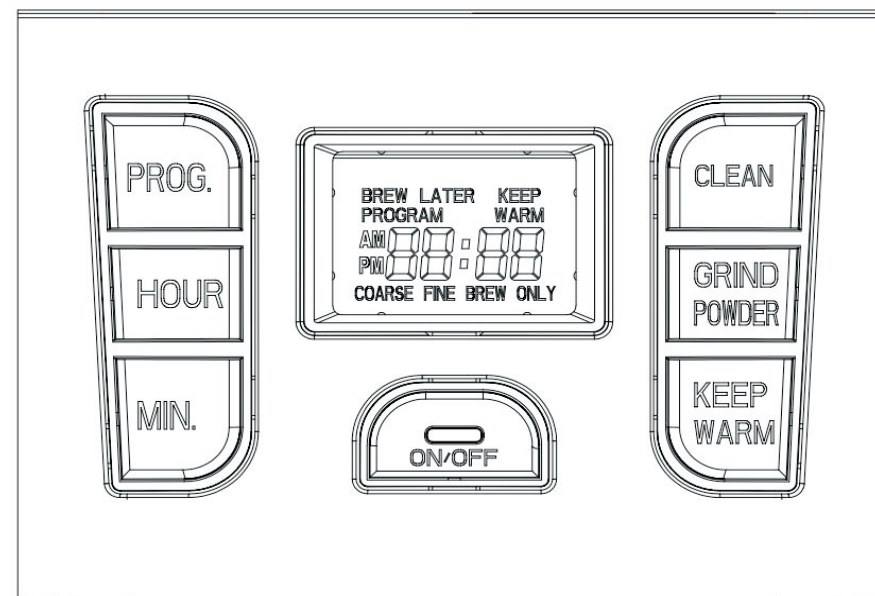 


Figure 1

HOUR,MIN. : Set the hours/ set the minutes, quickly change the number by long press.

PROG. : Program reservation for brewing coffee.

GRIND POWDER: Grind the beans and brew.(Working mode selection: Every time you press this button, the working mode switch between COASE, FINE, BREW ONLY, default COARSE)

A. Grind Coffee Beans:

Press the GRIND POWDER button, the display screen will show toggle between COARSE,FINE ,BREW ONLY ,Pls select the COARSE or FINE.

B. Gound coffee:

Press the GRIND POWDER button, the display screen will show toggle between COARSE , FINE , BREW ONLY,Pls select the BREW ONLY.

CLEAN: Cleaning mode button, press to enter the cleaning mode.

KEEP WARM: To set a keep warm time

(press every time, switch from OFF– 0:05 – 0:10 –0:15 –0:20 – 0:25 – 0:30– 0:35 –0:40 (the default keep warm settings will keep coffee hot for 40 minute)

ON/OFF: Start/Stop

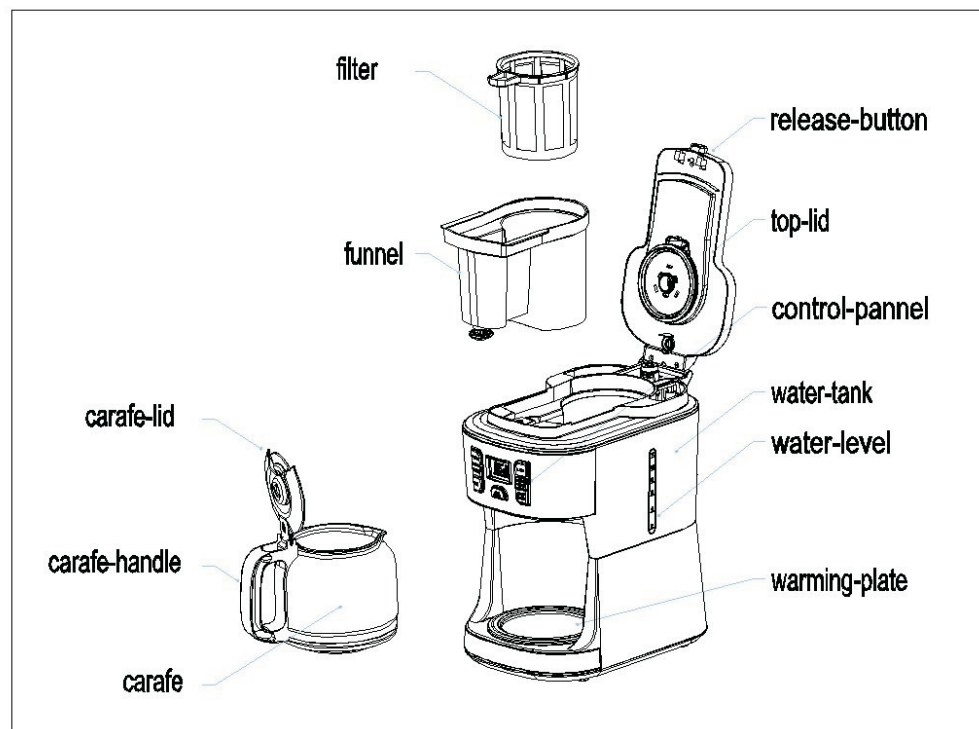 


Figure 2

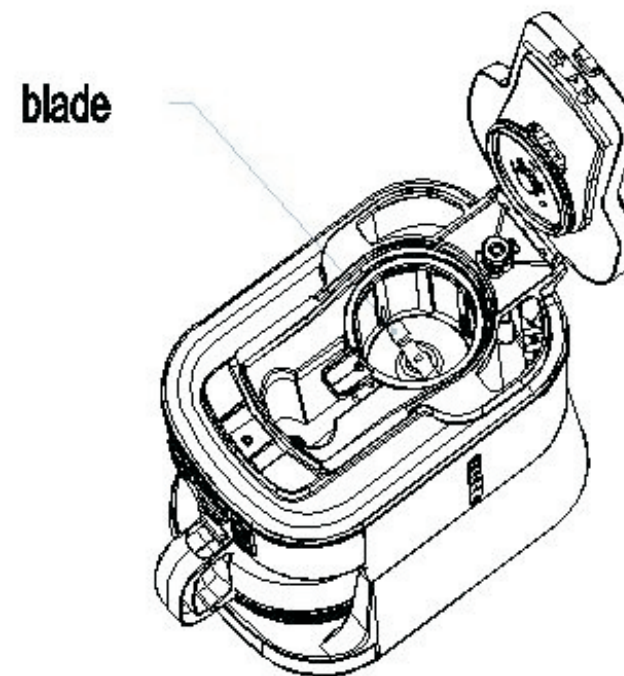 


Figure 3

KNOW YOUR COFFEE MAKER

Note: The filter is movable, to prevent the glass from touching the filter and causing the filter to move out of place, please put into the carafe after the top lid is closed.

1..The power cord is plugged into the socket, the WHITE background light is on. Indicated with 00: 00(system setting time), as shown in Figure 4:

Note: Make sure the power supply meets the specifications on the machine before use.

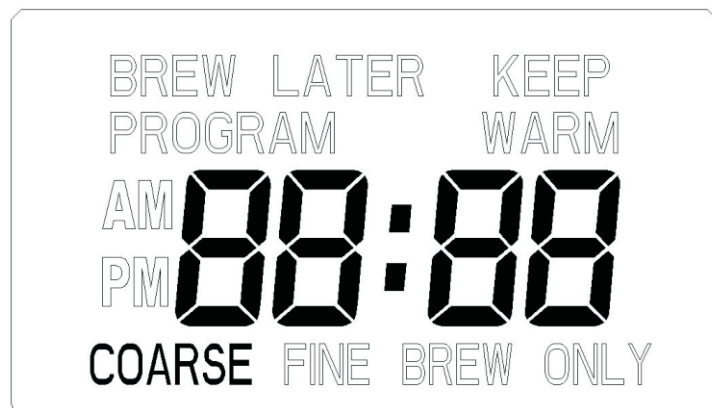 


Figure 4

3. To set the current time(Middle night is AM 12:00 ,midday is PM 12:00)

SETTING THE CLOCK

a. Time setting, press the HOUR button to adjust the hour plus 1, press the MIN. button to adjust the minute plus 1. After setting the program will immediately run according to the current time.

b. Hold the HOUR or MIN. button to quickly plus the time. If without any press within 5 seconds, the display will return back to the initially clock state, and the adjustment situation.

c. If the user does not adjust the time after booting, the time will keep running and flashing all the time. Until the user sets the current time.

USING YOUR COFFEE MAKER

GRIND AND BREW COFFEE BEANS

NOTE: Ensure the funnel and filter are completely dry before use.

1. Open the water reservoir's lid.
2. Use the carafe to fill the water reservoir. Follow the water window's indicators to fill to your desired amount of cups.

NOTE:

- The minimum amount of water is 2 cups.
- The maximum amount of water is 12 cups.

- Do not fill the water reservoir above the 12-cup indicator.
4. Use the scoop to add pre-ground coffee into the filter. Add 1 scoop per cup of coffee. Add additional grounds for stronger coffee. Do not fill above the Max indicator.
 4. Close the top lid. Place the carafe on the warming plate.
 5. Pressing the GRIND POWDER button, you will see the display will show toggle between COARSE, FINE, BREW ONLY. Pls choose COARSE or FINE.

NOTE: To brew coffee later, see PROGRAM MAKE RESERVATION FOR BREWING COFFEE on page 9.

6. Press the ON/OFF button to begin the automatic grind and brew process. The brew light will blink while grinding and illuminate while brewing.

NOTE:

- The carafe must be on the warming plate to begin brewing.
- During brewing, you can remove the carafe for serving, and the machine will temporarily stop dispensing. Do not remove for more than a minute or the machine will overflow.
- Do not open the water reservoir's lid while brewing is in process!

WARNING:

Do not touch the warming plate after brewing, it will be very hot! Only hold the carafe by the handle, the glass is very hot!

7. Once brewing has completed, **You will hear coffee machine alarm 3 times, and** default keep warm settings will keep coffee hot for 40 minute, the display counts up, showing time- since-brewed. The coffee maker will then automatically turn off.

8. Press the KEEP WARM button to select from turning the function off, or setting keep warm time for 5 minutes to 40 minutes.. (For detail, pls see the Set Keep Warm function)

To turn off the coffee maker at anytime: Press the ON/OFF button and ensure the brew light is off.

Always turn off the coffee maker and unplug the power cord from the outlet when not in use and before cleaning.

9. Clean the funnel and filter after each use. Allow the coffee grounds and coffee maker to cool before cleaning.

USING YOUR COFFEE MAKER

BREW PRE-GROUND COFFEE

NOTE: Ensure the funnel and filter are completely dry before use.

1. Open the water reservoir's lid.
2. Use the carafe to fill the water reservoir. Follow the water window's indicators to fill to your desired amount of cups.

NOTE:

- The minimum amount of water is 2 cups.
- The maximum amount of water is 12 cups.
- Do not fill the water reservoir above the 12-cup indicator.

3. Use the scoop to add coffee beans into the filter. Add 1 scoop per cup of coffee. Add additional coffee beans for stronger coffee. Do not fill above the Max indicator.

4. Close the top lid. Place the carafe on the warming plate.

5. Press the GRIND POWDER button, display will toggle between COARSE, FINE, BREW ONLY, Pls select BREW ONLY.

NOTE: To brew coffee later, see PROGRAM MAKE RESERVATION FOR BREWING COFFEE on page 9.

7. Press the ON/OFF button to begin brewing. The brew light will blink while grinding and illuminate while brewing.

NOTE:

- The carafe must be on the warming plate to begin brewing.
- During brewing, you can remove the carafe for serving, and the machine will temporarily stop dispensing. Do not remove for more than a minute or the machine will overflow.
- Do not open the water reservoir's lid while brewing is in process!

WARNING:

Do not touch the warming plate after brewing, it will be very hot! Only hold the carafe by the handle, the glass is very hot!

7. Once brewing has completed, **You will hear coffee machine alarm 3 times**, and

default keep warm settings will keep coffee hot for 2 hours, the display counts up, showing time- since-brewed. The coffee maker will then automatically turn off.

8. Press the KEEP WARM button to select from; turning the function off, or setting keep warm time for 5 minutes to 40 minutes..(For detail, pls see the **Set Keep Warm function**)

To turn off the coffee maker at anytime, Press the ON/OFF button and ensure the brew light is off.

Always turn off the coffee maker and unplug the power cord from the outlet when not in use and before cleaning.

9. Clean the funnel and filter after each use. Allow the coffee grounds and coffee maker to cool before cleaning.

USING YOUR COFFEE MAKER

PROGRAM MAKE RESERVATION FOR BREWING COFFEE

This coffee maker is equipped with a delay start function that allows you to program the start of coffee brewing up to 24 hours in advance.

NOTE: The time needs to be set before you can use the programmable timer. See SETTING THE CLOCK .

1. Follow steps 1-5 under GRIND AND BREW COFFEE BEANS or BREW PRE-GROUND COFFEE above.
2. Press the PROG.button, and BREW LATER PROGRAM will blink on the display.
3. Press the HOUR and MINUTE buttons to select your desired brew start time.
4. Press the PROG. button or wait 5 seconds to confirm the time. BREW LATER PROGRAM will appear on the display.
5. To cancel the delay start function, press the PROG. button again. The words BREW LATER PROGRAM will turn off.

SET KEEP WARM FUNCTION

Once brewing has completed, the default keep warm settings will keep coffee hot for 2 hours and then automatically turn off.

1. Press the KEEP WARM button to adjust the keep warm settings. KEEP WARM will blink on the display.
2. Press the KEEP WARM button to select from: turning the keep warm function off, or keeping warm for 5 minutes to 40 minutes. You can adjust keep warm settings at any time.

FRESHNESS INDICATOR

When in keep warm mode, the display will count up, letting you know how much time passed since the coffee was brewed.

CLEANING & MAINTENANCE

DESCALING THE COFFEE MAKER

WARNING: Please be sure to remove the plug from the wall socket during storage, and wipe the machine filter and water tank with soft and moist cloth. To prevent electric shock, do not immerse wires, plugs or devices in water or any liquid.

Clean all removable parts after each use.

The funnel, filter; carafe, and scoop are dishwasher safe.

FUNNEL AND CARAFE

Clean with warm soapy water and a non-abrasive sponge.

FILTER

Clean with warm soapy water and use a soft cloth to dry.

INTERIOR

Use a sponge or non-metal brush to clean the inside of the coffee maker. Then wipe it dry with a soft cloth.


WARMING PLATE AND EXTERIOR

Use a damp cloth to clean the warming plate and exterior of the coffee maker. Then wipe it dry with a soft cloth.

Do not use harsh cleaning agents or metal brushes, in order to avoid scratching the stainless steel surface

NOTE: Ensure the funnel and filter are completely dry before use
After using your coffee maker for a while, limescale will begin to build up inside the machine. It is important to descale your appliance every 2-3 months. If the machine is used daily, the descaling process should be done monthly.

- Plug the coffee maker into an outlet.
- Mix equal parts vinegar and water and pour it into the water reservoir. Close the lid. Place the carafe on the warming plate.
- Press the CLEAN Button, You will see the LCD display show CL, then press the ON/OFF button to brewing process.

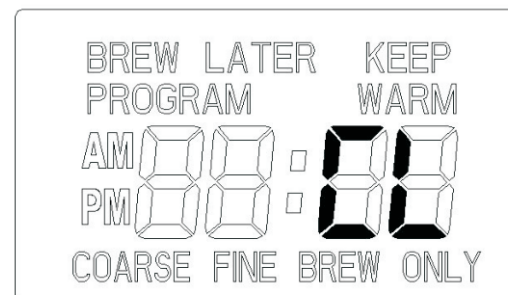

- When the brewing process is complete, fill up the coffee maker with water and begin brewing again. This washes out any remaining vinegar.
- If an odor of vinegar persists, run another cycle with water.
- Use a soft sponge and baking soda to remove stains from the carafe. If the stains remain, mix 1 cup water, 1 cup vinegar and 1/2 cup of baking soda and allow it to sit in the carafe overnight.

STORAGE

- Unplug the appliance and let it cool down.
- Make sure all parts are clean and dry.
- Store the appliance in a clean and dry place.

ENVIRONMENT

Do not throw away the appliance with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment.

Tips on delicious coffee:

1. A clean coffee machine is the key to making delicious coffee. Use clean water and clean and maintain coffee brewer regularly.
2. Store unused coffee grounds or beans in a cool, dry place. After opening, it should be sealed to keep fresh.
Tip: To get the best coffee, choose the right coffee ground or beans according to your preference. Medium Roast is recommended.
3. Do not reuse the brewed coffee powder, as reheating can greatly reduce the taste of the coffee.
4. When a small amount of oil appears on the surface of the coffee when brewing, because the coffee contains its own oil.
5. If you use heavily roasted coffee, it will give off more oil