

SOKANY®

MULTI-PURPOSE BLENDER

Model: SK-666N



220-240V 50-60HZ 5000W MADE IN P.R.C



CONTENT



Important Hints

- *Read this instruction manual carefully before operating this unit.
- *Children are not allowed operate this unit.
- *Before using this unit,check the mains power voltage corresponds to the voltage shown on the rating plate.
- *Always remove the plug from the power socket when this unit is not in use and before carrying out any cleaning or maintenance operation.
- *Never leave this unit unattended when it seitched on.Keep this unit out of the reach of the children.
- *Do not switch the appliance on if it appears to be faulty in any way.
- *For repairs of accessories,contact your dealer or an authorized Service Center.
- *It is not allowed to immerse the base into water for cleaning and it is forbidden to start the unit or press the control button by wet hands.
- *The water temperature should not be over 60°C when cleaning the unit.
- *Do not run this unit long-time,otherwise the inner parts will be damaged.
- *When the motor is running ,do not put water into the cup.
- *If the supply cord is damaged, it must be replaced by the manufacturer. its service agent or similarly qualified persons if order to avoid a hazard.

- *This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- *Children should be supervised to ensure that they do not play with the appliance.
- *When the motor running or the blender accessory is installed to the stand, do not insert your fingers or other ob ects into the container. Also do not try to open the lid during the appliance is operating.
- *Only use this appliance and the blender accessory for its intended purposes. Do not use the appliance and the blender accessory for other purpose than described in this user instruction manual.
- *Care shall be taken when handling the sharp cutting blades,emptying the container and during cleaning. Do not try to disassembling the cutting blade form the container or misuse the accessory other than the correct purpose to prevent dangers

Instruction for use of Blender

1.Making Fruit/vegetable Sauce

- *Put the food cut into cubes(20-25mm)into the blender cup;make sure the volume is not over 2/3 of the cup.Add some water into the cup;the water volume is enough to make sure the food can be stirred smoothly.Add then put on the blender cup cover and turn tight clockwise.

Troubleshooting

Trouble	Possible	Cause Check
Motor does not operate	Safety lock is not connected	Reassemble the cup and connect with the base correctly
Motor overheat or Smell not good	Too much food or Working time too long	Reduce the food and run it Again after the unit cool down
Making sauce not good	No water or water not enough	Add suitable water

Maintenance

- *Avoid any bumping of the appliance,otherwise it will be deformed or broken.
- *After usage,please clean the appliance and wipe the parts with a dry cloth and store it in dry and windy place.