

SOKANY[®]

HOT HAIR BRUSH

MODEL:SK-904A

INSTRUCTION MANUAL



220-240V~ 50/60Hz 900-1200W MADE IN P.R.C



IMPORTANT SAFETY INSTRUCTIONS

Please read the following safety warnings and the instructions carefully before using the appliance and keep for future reference.

Warnings

- 1.This appliance is intended for domestic household use only and should not be used for any other purpose or in any other application, such as for non-domestic use or in a commercial environment.
- 2.If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- 3.This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- 4.Regarding the detailed instructions for the safe use of the appliance and the precautions during user maintenance, refer to the section “Operation” and “Cleaning and Maintenance” on pages EN6 of the manual.
- 5.When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off.
- 6.For additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.



WARNING:

- 1.Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
- 2.Burn hazard. Keep appliance out of reach from young children, particularly during use and cool down.When the appliance is connected to the power supply, never leave it unattended.Always place the appliance with the stand, if any, on a heat-resistant, stable flat surface.
- 3.WARNING: Do not use this appliance near water.

Safety Precautions:

- 1.Always turn off and unplug the appliance when not in use or before cleaning.
- 2.Take care to avoid contact between the hot surfaces of the appliance and the skin, paying particular attention to the face, neck, and hands.
- 3.Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- 4.Do not block the air inlet or outlet.
- 5.Do not drop or insert any object into any opening
- 6.Do not leave the appliance unattended when plugged in.
- 7.Use the appliance only for its intended use as described in this manual.
- 8.To protect against the risk of electric shock, do not immerse the appliance in water or in any other liquid.
- 9.Do not use the appliance with wet hands.
- 10.Keep the cord away from heated surfaces. Do not pull, twist, or wrap cord around appliance.
- 11.Children should be supervised to ensure that they do not play with the appliance.
- 12.If the airflow is inadvertently obstructed during use, the built-in thermal safety cut-off device will automatically switch off the appliance. The appliance will switch on again automatically after cooling down for a few minutes.
- 13.Keep your hair away from the immediate vicinity of inlet opening to prevent from being drawn in.