

SOKANY[®]

ROTI MAKER

MODEL:SK-08046

INSTRUCTION MANUAL



220-240V 50/60Hz 1200W MADE IN P.R.C

RoHS EAC  CE   


CONTENT

EN/ ENGLISH -----01-03

IMPORTANT SAFEGUARDS

• READ ALL INSTRUCTIONS

- Make sure the voltage in your outlet is the same as the voltage indicated on the appliance's rating label. Use only for household.
- Do not touch hot surfaces. Use handle.
- To protect against risk of electric shock, do not immerse the cord, plug or cooking unit in water or any other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning appliance.
- Do not operate any appliance with a damaged has malfunctioned or has been damaged in any manner. In order to avoid the risk of an electric shock, never try to repair the Roti Maker yourself. Take it to an authorized service station for examination and repair. An incorrect reassembly could present a risk of electric shock when the Roti Maker is used.
- The use of accessory attachments not recommended by the manufacturer may result in fire, electrical shock, or risk of injury to persons.
- Do not use outdoors or for commercial purposes.
- Do not let power cord hang over the edge of the table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner or heated oven.
- Unplug the unit when finished using.
- Extreme caution must be exercised when moving an appliance.

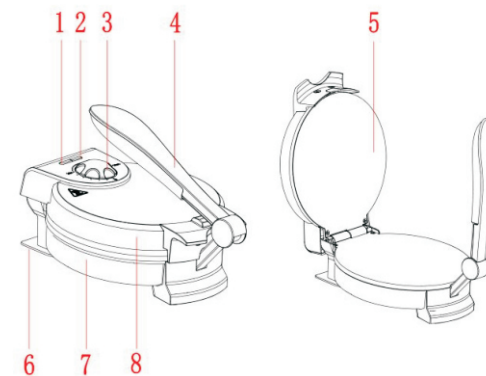

1. Power Light (Red)
2. Ready Light (Green)
3. Knob
4. Press Handle
5. Plate
6. Power Cover
7. Bottom Housing
8. Upper Housing

BEFORE FIRST USE

- Read all instructions carefully and keep them for future reference.
- Remove all packaging.
- Clean the Cooking Plates by wiping with a sponge or cloth dampened in warm water.

DO NOT IMMERSE THE UNIT AND DO NOT RUN WATER DIRECTLY ONTO THE COOKING SURFACE.

- Dry with a cloth or paper towel.
- Lightly coat the cooking plates with a little cooking oil or a cooking spray.

NOTE: When your Roti Maker is heated for the first time, it may emit slight smoke or odor. This is normal with many heating appliances. This does not affect the safety of your appliance.

HOW TO USE

- Close the roti maker and plug it into the wall outlet, you will notice that the red power light and the green ready light will go on, indicating that the roti maker has begun preheating.

- It will take approximately 3 to 5 minutes to reach baking temperature. The red power light will remain on until you unplug your roti maker. When the green light goes off, the roti maker is ready for use.

- Open the roti maker and make each piece of about 1/2" diameter (please remember to keep kneaded dough out for at least 30 minutes before you start making roties). Slightly flatten it and place it off centre towards the higher on the bottom plate of your Roti Maker.

- Quickly and firmly press down, closing the upper plate. Hold for less than a second. Open it immediately and centre it. Leave it this way for about 15-20 seconds.

- Turn the roti and in about 20-25 second you'll see air bubbles begin to appear on the top surface of the roti.

- for serving.

When this happens turn the roti to the side and very gently shut the Upper plate. The roti will start puffing up on both sides and in a few seconds is ready

- Once the roti cooked, open the Roti Maker and carefully remove it from the Roti Maker with a non-metallic utensils. Never touch the cooking surface with sharp, pointy or metal objects. This could damage the no-stick surface.

- To cook more rotis, close roti maker to retain heat. Always be sure the green light goes off again before making more rotis.

IMPORTANT: EVERY TIME YOU MAKE ROTI, PRE-HEAT THE APPLIANCE UNTIL THE GREEN LIGHT GOES OFF.

- Once you are finished cooking, disconnect the plug from the wall outlet and leave the Roti maker open to cool.

CLEANING AND CARE

- Always unplug the Roti maker and allow it to cool before cleaning. There is no need to disassemble the Roti maker for cleaning.
- Wipe the outside of the Roti maker with a damp cloth only. Do not clean the outside with any abrasive scouring pad or steel wool, as this will damage the finish. A little metal polish suitable for stainless steel may be used occasionally on the top housing.
- Never immerse the Roti maker in water or place in dishwasher.
- Do not use metal utensils to remove your rotis, they can damage the non-stick surface.

STORAGE

- Always unplug the Roti Maker before storage.
- Always make sure the Roti Maker is cool and dry before string.
- The power cord can be wrapped around the bottom of base for storing.